FLUKE 79/29

Series II Multimeter

Service Manual

FLUKE®

Digitized by the Internet Archive
in 2025

https://archive.org/details/manualsplus_08490

FLUKE 79/29

Series II Multimeter

Service Manual

PN 896209
July 1991 Rev. 2, 1/94
©1994 Fluke Corporation. All rights reserved. Printed in U.S.A.
All product names are trademarks of their respective companies

FLUKE®

OPERATOR SAFETY INFORMATION

This meter has been designed and tested according to IEC Publication 348. Follow all safety and operating instructions to ensure that the meter is used safely and is kept in good operating condition.

- Never use the meter if the meter or test leads look damaged.
- Always turn off power to the meter before cutting, unsoldering, or breaking the circuit. Small amounts of current can be dangerous.
- Never measure resistance in a circuit when power is applied to the circuit.
- Never touch the probes to a voltage source when the test leads are plugged into the 10A or 300 mA input jack.
- To avoid damage or injury, never use the meter on unprotected circuits that exceed 4800 volt-amps.
- Never apply more than 1000V dc or 750V ac rms (sine) between any input jack and earth ground.
- Always be careful when working with voltages above 60V dc or 30V ac rms. Such voltages pose a shock hazard.
- Always keep your fingers behind the finger guards on the probe when making measurements.
- Always use a high voltage probe to measure voltage if the peak voltage might exceed 1000V.

SYMBOLS MARKED ON EQUIPMENT

DANGER - High voltage.

Attention - refer to the manual. This symbol indicates that information about usage of a feature is contained in the manual.

Fuse information.

USE THE PROPER FUSE

To avoid fire hazard, use only a fuse identical in type, voltage rating, and current rating as specified on the case bottom fuse rating label.

DO NOT OPERATE DISASSEMBLED METER

Always operate the meter with case top and bottom properly assembled.

Access procedures and the warnings for such procedures are contained in this Service Manual. Service procedures are for qualified service personnel only.

DO NOT ATTEMPT TO OPERATE IF PROTECTION MAY BE IMPAIRED

If the meter appears damaged or operates abnormally, protection may be impaired. Do not attempt to operate it. When in doubt, have the meter serviced.

Table of Contents

SECTION		TITLE	PAGE
1	**Introduction and Specifications**		1-1
	1-1.	INTRODUCTION	1-3
	1-2.	ORGANIZATION OF THE SERVICE MANUAL	1-3
	1-3.	CONVENTIONS	1-3
	1-4.	SPECIFICATIONS	1-4
2	**Theory of Operation**		2-1
	2-1.	INTRODUCTION	2-3
	2-2.	FUNCTIONAL BLOCK DESCRIPTION	2-3
	2-3.	CIRCUIT DESCRIPTIONS	2-4
	2-4.	Input Overload Protection	2-4
	2-5.	Rotary Knob Switch	2-4
	2-6.	Input Signal Conditioning Circuits	2-4
	2-7.	VOLTS FUNCTIONS	2-4
	2-8.	OHMS FUNCTIONS	2-5
	2-9.	CURRENT FUNCTIONS	2-7
	2-10.	CONTINUITY, LOW OHMS AND DIODE TEST FUNCTIONS	2-7
	2-11.	Analog Section of Integrated Multimeter IC (U4)	2-7
	2-12.	CAPACITANCE MEASUREMENTS	2-9
	2-13.	FREQUENCY MEASUREMENTS	2-9
	2-14.	Microcomputer Control	2-9
	2-15.	Peripherals to U4	2-9
	2-16.	AC BUFFER	2-9
	2-17.	AC CONVERTER	2-10
	2-18.	ACTIVE FILTER	2-10
	2-19.	A/D CONVERTER	2-11
	2-20.	BEEPER	2-11
	2-21.	POWER SUPPLY	2-11
	2-22.	Display	2-11
3	**Maintenance**		3-1
	3-1.	INTRODUCTION	3-3
	3-2.	RECOMMENDED EQUIPMENT	3-3
	3-3.	OPERATOR MAINTENANCE	3-4
	3-4.	Case Disassembly	3-4

SECTION		TITLE	PAGE
	3-5.	Battery Replacement	3-4
	3-6.	Fuse Test	3-4
	3-7.	Fuse Replacement	3-4
	3-8.	Circuit Assembly Removal	3-6
	3-9.	Display Access	3-6
	3-10.	CLEANING	3-6
	3-11.	PERFORMANCE TESTS	3-7
	3-12.	Setup	3-7
	3-13.	Display Test	3-7
	3-14.	DC Voltage Test	3-8
	3-15.	mV DC Test	3-8
	3-16.	AC Voltage Test	3-9
	3-17.	Frequency Test	3-9
	3-18.	Ohms Test	3-9
	3-19.	Capacitance Test	3-10
	3-20.	Continuity Test	3-11
	3-21.	Diode Test	3-11
	3-22.	DC and AC Current Test	3-11
	3-23.	CALIBRATION	3-12
	3-24.	TROUBLESHOOTING	3-13
	3-25.	Surface Mount Assemblies	3-13
	3-26.	Power Supply Related Troubleshooting	3-14
	3-27.	Common (Shunt) Regulator Troubleshooting	3-15
	3-28.	Vdd (Series) Regulator Troubleshooting	3-15
4		**List of Replaceable Parts**	**4-1**
	4-1.	INTRODUCTION	4-3
	4-2.	HOW TO OBTAIN PARTS	4-3
	4-3.	SERVICE CENTERS	4-3
5		**Schematic Diagrams**	**5-1**

List of Tables

TABLE	TITLE	PAGE
1-1.	Specifications	1-5
2-1.	Typical Voltage Levels and Tolerance	2-11
3-1.	Recommended Test Equipment	3-3
3-2.	DC Voltage Test	3-8
3-3.	mV DC Voltage Test	3-8
3-4.	AC Voltage Test	3-9
3-5.	Frequency Test	3-9
3-6.	Resistance Test	3-10
3-7.	Capacitance Test	3-11
3-8.	Continuity Test	3-11
3-9.	DC and AC mA Test	3-11
3-10.	DC Amps Test	3-12
3-11.	Functional Description of Power Supply Components	3-14
3-12.	Voltage Levels	3-15
4-1.	Final Assembly (Models 79,29)	4-4
4-2.	A1 Main PCA (Models 79,29)	4-7

List of Illustrations

FIGURE	TITLE	PAGE
2-1.	Block Diagram	2-3
2-2.	4V Range Simplified Schematic	2-5
2-3.	400-Ohm Range Simplified Schematic	2-6
2-4.	A/D Converter	2-8
2-5.	100-nF Range Simplified Schematic	2-10
3-1.	Assembly Details	3-5
3-2.	Display	3-7
3-3.	Calibration Adjustment Points	3-13
4-1.	Final Assembly (Models 79,29)	4-5
4-2.	A1 Main PCA (Models 79,29)	4-9
5-1.	A1 Main PCA	5-2
5-2.	Signal Flow Diagram	5-3

Chapter 1
Introduction and Specifications

CONTENTS PAGE

1-1. INTRODUCTION 1-3
1-2. ORGANIZATION OF THE SERVICE MANUAL 1-3
1-3. CONVENTIONS 1-3
1-4. SPECIFICATIONS 1-4

INTRODUCTION 1-1.

This service manual provides information on maintaining, troubleshooting, and repairing the Fluke 79 and 29 Multimeters. The manual also provides specifications, theory of operation, calibration routines, testing and troubleshooting procedures, parts replacement information, and schematic diagrams.

A meter under warranty will be promptly repaired or replaced (at Fluke's option) and returned at no charge. See the registration card for warranty terms. If the warranty has expired, the meter will be repaired and returned for a fixed fee. Contact the nearest Service Center for information and prices. A list of U.S. and International Service Centers is included at the end of Section 4 of this manual.

ORGANIZATION OF THE SERVICE MANUAL 1-2.

The following descriptions for the various sections serve to introduce the manual.

SECTION 1. INTRODUCTION AND SPECIFICATIONS

This section describes both use of the Service Manual and application of special terminology (conventions) to describe the meter's circuitry. A complete set of specifications appears at the end of this section.

SECTION 2. THEORY OF OPERATION

This section first categorizes instrument circuitry into functional blocks, with a description of each block's role in overall operation. A detailed circuit description is then given for each block. These descriptions explain operation to the component level and support the troubleshooting and repair procedures defined in Section 3.

SECTION 3. MAINTENANCE

This section provides complete maintenance information ranging from general maintenance, cleaning instructions, and detailed troubleshooting to repair procedures involving component-level adjustments. Troubleshooting and repair procedures rely heavily on both the Theory of Operation presented in Section 2 and the Schematic Diagrams shown in Section 5.

SECTION 4. LIST OF REPLACEABLE PARTS

The section includes parts lists for all standard assemblies. Information on how and where to order parts is also provided.

SECTION 5. SCHEMATIC DIAGRAMS

This section provides schematic diagrams for all assemblies. A list of mnemonic definitions is also included to aid in identifying signal name abbreviations.

CONVENTIONS 1-3.

Throughout the manual, certain notational conventions are used. A summary of these conventions follows:

- Printed Circuit Assembly

  The term "pca" is used to represent a printed circuit board and its attached parts.

- Circuit Nodes

  Individual pins or connections on a component are specified by a dash (-) following the component reference designator. For example, pin 19 of U30 would be U30-19.

- User Notation

  Generally, function switch positions to select, input terminals to use, and display notation to be read are presented in this manual as they are seen on the multimeter.

  Special terms (mnemonics) used in text descriptions of multimeter circuitry correspond to terms used on the schematic diagrams in Section 5.

SPECIFICATIONS 1-4.

Specifications for Models 79 and 29 are presented in Table 1-1.

Accuracy is specified for a period of one year after calibration, at 18°C to 28°C (64°F to 82°F) with relative humidity to 90%. AC conversions are ac-coupled, average responding, and calibrated to the rms value of a sine wave input.

Accuracy Specifications are given as:

±([% of reading] + number of least significant digits)

Table 1-1. Specifications

Maximum Voltage Between any Terminal and Earth Ground	1000V dc, 750V ac rms(sine)
Fuse Protection	40 mA: 1A 600V FAST Fuse 10A: 15A 600V FAST Fuse
Display	Digital: 4000 counts, update rate 4/sec Analog: 63 segments, updates 40/sec Frequency: 9,999 counts Capacitance: 9,999 counts
Operating Temperature	0°C to 55°C
Storage Temperature	-40°C to 60°C
Temperature Coefficient	0.1 x (specified accuracy)/°C (<18°C or >28°C)
Relative Humidity	0% to 90% (0°C to 35°C) 0% to 70% (35°C to 55°C)
Battery Type	9V, NEDA 1604 or 6F22 or 006P
Battery Life	700 hrs typical with alkaline 500 hrs typical with carbon zinc
Continuity Beeper	4096 Hz
Shock, Vibration	Per MIL-T-28800 for a Style B, Class 2 Instrument
Size (HxWxL)	1.12 in x 2.95 in x 6.55 in (2.8 cm x 7.5 cm x 16.6 cm)
Weight	12 oz (340g)
Safety	Designed to Protection Class II per IEC 348, ANSI/ISA-S82, UL1244, and CSA C22.2 No.231

Table 1-1. Specifications (cont)

FUNCTION	RANGE	RESOLUTION	ACCURACY	BURDEN VOLTAGE(TYPICAL)
VAC	400.0 mV	0.1 mV	±(1.9%+4)	
(45 Hz to	4.000V	0.001V	±(1.9%+2)	Not Applicable
1 kHz)	40.00V	0.01V	±(1.0%+2)	
	400.0V	0.1V	±(1.0%+2)	
	750V	1V	±(1.0%+2)	
To 20 kHz			±1.5 dB typical	
VDC	4.000V	0.001V	±(0.3%+1)	Not Applicable
	40.00V	0.01V	±(0.3%+1)	
	400.0V	0.1V	±(0.3%+1)	
	1000V	1V	±(0.3%+1)	
mVDC	40.00 mV	0.01 mV	±(0.3%+5)	Not Applicable
	400.0 mV	0.1 mV	±(0.3%+1)	
Ω	400.0Ω	0.1Ω	±(0.4%+2)	
	4.000 kΩ	0.001 kΩ	±(0.4%+1)	Not Applicable
	40.00 kΩ	0.01 kΩ	±(0.4%+1)	
	400.0 kΩ	0.1 kΩ	±(0.4%+1)	
	4.000 MΩ	0.001 MΩ	±(0.4%+1)	
	40.00 MΩ	0.01 MΩ	±(1%+3)	
Capacitance	99.99 nF	0.01 nF	±(1.9%+2)	
	999.9 nF	0.1 nF	(±1.9%+2)[1]	Not Applicable
	9.999 µF	0.001 µF	±(1.9%+2)[1]	
	99.99 µF	0.01 µF	±(1.9%+2)[1]	
	999.9 µF	0.1 µF	±(1.9%+2)[1]	
	9999 µF	1 µF	±10% Typical	
)))	400Ω	0.1Ω	5% typical	Not Applicable
40Ω	40Ω	0.01Ω	5% typical	Not Applicable
(Lo-Ohms)	400Ω	0.1Ω	5% typical	
	8 kΩ	1Ω	10% typical	
Diode Test	2.450V	0.001V	±2% typical	Not Applicable
AAC	4.000 mA	0.001 mA	±(1.5%+4)	11 mV/mA
(45 Hz to	40.00 mA	0.01 mA	±(1.5%+2)	11 mV/mA
1 kHz)	4A	0.001A	±(1.5%+4)	0.03 V/A
	10.00 A[2]	0.01A	±(1.5%+2)	0.03 V/A

Table 1-1. Specifications (cont)

FUNCTION	RANGE	RESOLUTION	ACCURACY	BURDEN VOLTAGE (Typical)
ADC	4.000 mA	0.001 mA	±(0.5%+5)	11 mV/mA
	40.00 mA	0.01 mA	±(0.5%+2)	11 mV/mA
	4A	0.001A	±(0.5%+5)	0.03 V/A
	10.00 A[2]	0.01A	±(0.5%+2)	0.03 V/A
Frequency[3]	99.99	0.01 Hz	±(0.01%+1)	Not Applicable
(1 Hz to	999.9	0.1 Hz	±(0.01%+1)	
20 kHz)	9.999 kHz	0.001 kHz	±(0.01%+1)	
	20.00 kHz	0.01 kHz	±(0.01%+1)	
	20.00-99.9	9 kHz ±0.01 kHz	Usable	
	>99.99 kHz	0.1 kHz	Usable	

FREQUENCY COUNTER SENSITIVITY AND TRIGGER LEVEL		
Input Range[4]	Minimum Sensitivity (RMS Sine Wave)	
	500 Hz to 20 kHz	1.0 Hz to 500 Hz[5]
400 mV ac	150 mV	500 mV
4V ac	0.3V	0.7V
40V ac	3V	7V
400V ac	30V	70V
750V ac	300V	700V

Table 1-1. Specifications (cont)

FUNCTION	OVERLOAD PROTECTION+	INPUT IMPEDANCE (NOMINAL)	COMMON MODE REJECTION RATIO (1 KΩ UNBALANCE)		NORMAL MODE REJECTION
VDC	1000V dc 750V ac rms (sine)	>10 MΩ, <100 pF	>120 dB at dc, 50 Hz, or 60 Hz		>60 dB at 50 or 60 Hz
mVDC	1000V dc 750V ac rms (sine)	10 MΩ, <100 pF	>120 dB at dc, 50 Hz, or 60 Hz		>60 dB at 50 or 60 Hz
VAC	1000V dc 750V ac rms (sine)	>10 MΩ, <100 pF (ac-coupled)	>60 dB, dc to 60 Hz		
Ω	500V dc, 500V rms (sine)	Open Circuit Test Voltage	Full Scale Voltage		Short Circuit Current
			To 4.0 MΩ	40 MΩ	
		<1.3V dc	<450 mV dc	<1.3V dc	<500 µA
→|←	500V dc, 500V rms (sine)	<3.1V dc	2.45V dc	--	800 µA typical

NOTES

[1] With film capacitor or better and open lead reading subtracted from measurement. This meter uses a dc-type measurement technique..

[2] 10A continuous, 20A for 30 seconds.

[3] For rectangular waveforms 25% <= duty cycle <= 75%

[4] Maximum input for specified accuracy = 10 x Ranfge or 750V.

[5] Display rattle for sine wave below 500 = 5 counts.

[6] 10^7 V-Hz max.

Chapter 2
Theory of Operation

CONTENTS PAGE

2-1. INTRODUCTION 2-3
2-2. FUNCTIONAL BLOCK DESCRIPTION 2-3
2-3. CIRCUIT DESCRIPTIONS 2-4
2-4. Input Overload Protection 2-4
2-5. Rotary Knob Switch 2-4
2-6. Input Signal Conditioning Circuits 2-4
2-7. VOLTS FUNCTIONS 2-4
2-8. OHMS FUNCTIONS 2-5
2-9. CURRENT FUNCTIONS 2-7
2-10. CONTINUITY, LOW OHMS AND DIODE TEST FUNCTIONS 2-7
2-11. Analog Section of Integrated Multimeter IC (U4) 2-7
2-12. CAPACITANCE MEASUREMENTS 2-9
2-13. FREQUENCY MEASUREMENTS 2-9
2-14. Microcomputer Control 2-9
2-15. Peripherals to U4 2-9
2-16. AC BUFFER 2-9
2-17. AC CONVERTER 2-10
2-18. ACTIVE FILTER 2-10
2-19. A/D CONVERTER 2-11
2-20. BEEPER 2-11
2-21. POWER SUPPLY 2-11
2-22. Display 2-11

INTRODUCTION 2-1.

This section describes the theory of operation for the Fluke 79 and Fluke 29 Multimeters. Unless otherwise specified, the descriptions apply to both instruments.

Functional block descriptions present an overview of circuit operation followed by circuit descriptions, which detail the major circuit functions. Schematic diagrams are provided in Section 5.

FUNCTIONAL BLOCK DESCRIPTION 2-2.

The instrument is partitioned into analog and digital sections. (See Figure 2-1 Block Diagram.) The integrated multimeter chip (U4) performs both analog and digital functions, which are explained in more detail below.

The analog section of U4 contains the a/d converter, active filter, ac converter, frequency comparator, analog signal routing, range switching, and power supply functions.

The digital section of U4 executes software functions, formats data for the display, drives the display, and controls most analog and digital logic functions. The push button initiates various operating modes for the meter. Output from the digital section can be viewed on the liquid crystal display (LCD) and is audible through the beeper.

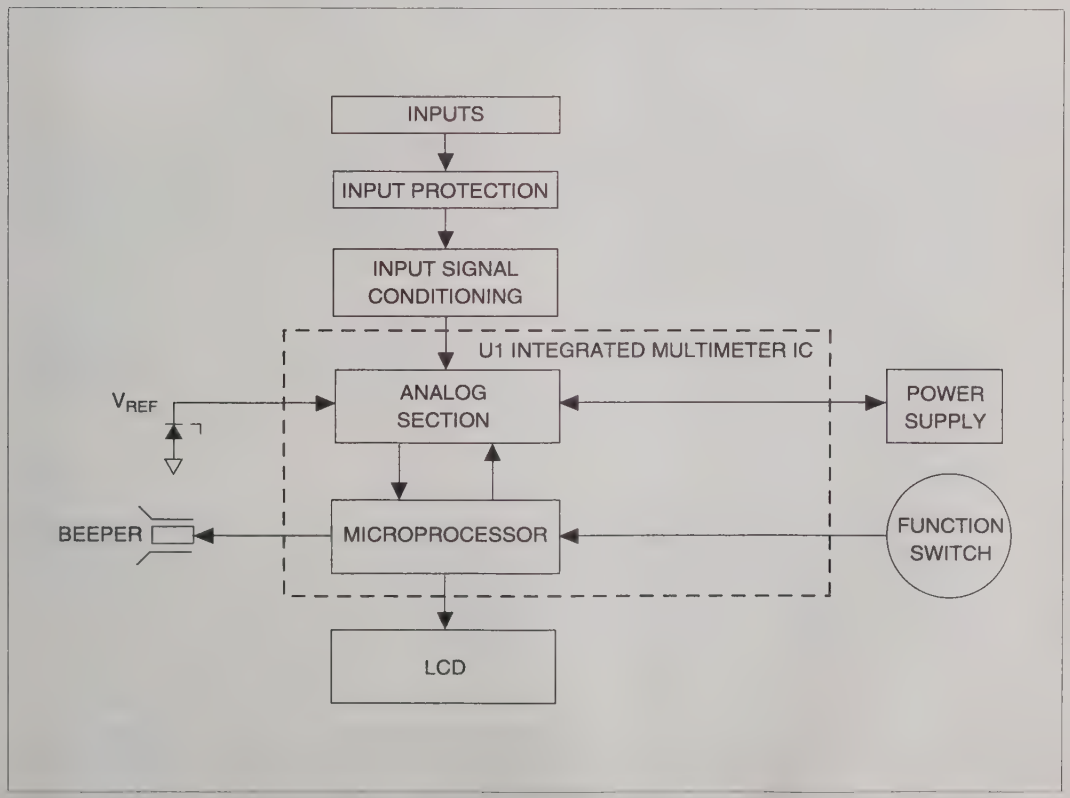

Figure 2-1. Block Diagram

CIRCUIT DESCRIPTIONS 2-3.

The following paragraphs discuss the functional blocks in Figure 2-1. Consult the schematic diagrams, located in Section 5, for additional circuit details not provided in this section.

Input Overload Protection 2-4.

The VΩ→⊢ input is protected from overload by a network consisting of two metal-oxide varistors (RV1 and RV2), three current-limiting resistors (R1, R2, and RT1), and spark gap E1. The presence of an extremely high energy signal causes R1 (1 kΩ, 2W), a fusible resistor, to open. Thermistor RT1 rises to a high impedance during a sustained voltage overload in the millivolts dc, ohms, or continuity mode. Transistors Q1 and Q2 form a voltage clamp network. This clamp performs a circuit limiting function on the overload current to U4 at 10 mA during ohms and continuity overloads. Power supply regulation and system operation is maintained during any of these overloads.

The mA input is protected from overloads by F1 (1A/600V), while F2 (15A/600V) protects the A input. Milliamp shunt resistor R5 is protected from overload currents below the F1 fusing level by the U1 and CR1 diode clamp network.

Rotary Knob Switch 2-5.

Input signals are routed from the overload protection circuits to a double-sided switch wafer. This switch wafer provides the necessary connections to implement signal conditioning and function-encoding for U4.

Input Signal Conditioning Circuits 2-6.

Each input signal is routed through signal conditioning circuitry before reaching multimeter chip U4. Incoming signals received through the VΩ→⊢ input are routed to precision resistor network Z1. This divider network precisely scales the input for the various voltage ranges and provides precision reference resistors that are used for the ohms and capacitance functions.

Input divider Z1 is used in two modes, series and parallel. In volts functions, a series mode provides four divider ratios. In the ohms function, a parallel mode provides five reference resistors. During the following discussion, refer to schematic and signal flow diagrams in Section 5.

VOLTS FUNCTIONS 2-7.

In volts functions, signal flow for input divider Z1 begins with a voltage that appears at the VΩ→⊢ input. (See Figure 2-2, 4V Range Simplified Schematic.) This input is connected to the high end of the 9.996-MΩ resistor (Z1-1) through R1 and RT1. If the AC volts function is selected, dc blocking capacitor C1 is also connected in series. If the DC volts function is selected, C1 is shorted by S1 (contacts 6 and 7).

Internal switches connect the 9.996-MΩ and 1.1111-MΩ resistors (Z1-2 and -3). The low end of the 1.1111-MΩ resistor (Z1-7) is connected to the COM input through S1 contacts 11 and 12. This produces the divide-by-10 ratio needed for the 400 mV ac, 4V ac, and 4V dc ranges. The 400 mVac and 4Vac ranges require frequency compensation, which is supplied by C20 (not shown in Figure 2-2.)

For the 40V range, internal switches connect the Z1-4 (101.01 kΩ) resistor to provide a divide-by-100 ratio. In the 400V range, Z1-5 (10.01 kΩ) produces a divide-by-1,000 ratio. And in the 1000V range, the Z1-6 (1.0001 kΩ) resistor provides a divide-by-10,000 ratio.

OHMS FUNCTIONS 2-8.

When the 400-ohm range is selected, internal switches connect the resistor Z1-2 (9.996 MΩ) to resistor Z1-6 (1.0001 kΩ). (See Figure 2-3, 400-Ohm Range Simplified Schematic.) Then through switch contacts S1 6, 7, and 9, these resistors form a reference resistor of 1 kΩ.

The source voltage is connected internally at both V0 and V4 of U4. The current is routed through two parallel resistors Z1-6 and Z1-2 (1.0001 kΩ and 9.996 MΩ), into S1 at contacts 6 and 9. The signal then travels out of S1 at contact 7, through R1 and RT1 and to the VΩ→⊢ input. The signal then goes through the unknown resistance, and back to the COM input. The same current flows through the unknown resistance and the reference resistor. The voltage dropped across the unknown resistance is sensed from the VΩ→⊢ input jack through R2 and S1 (contacts 2 and 3) to OVS of U4.

The a/d converter senses the voltage drop across the 1 kΩ reference resistor through the low (RRS of U4 through R13) and high (V0 and V4) points. These two voltages are used by the a/d converter to perform a ratiometric measurement. Since the same current flows through the reference and unknown resistors, the ratio of the resistance values is the same as the ratio of the voltage drops across them.

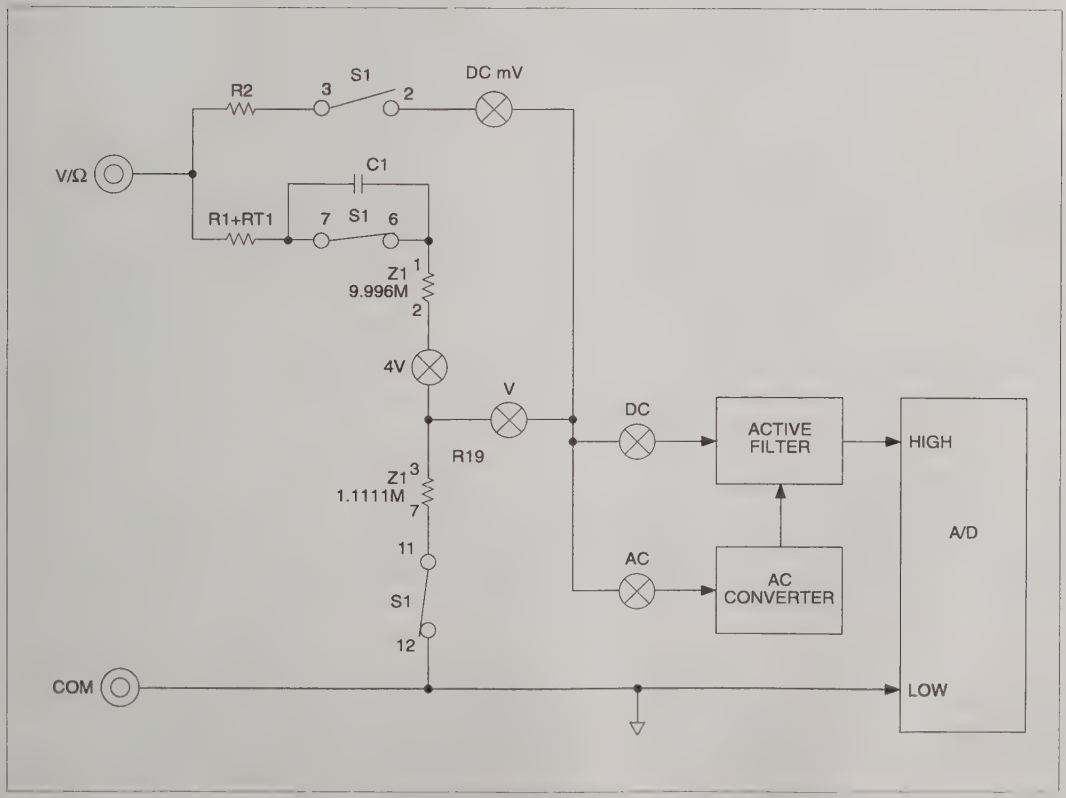

Figure 2-2. 4V Range Simplified Schematic

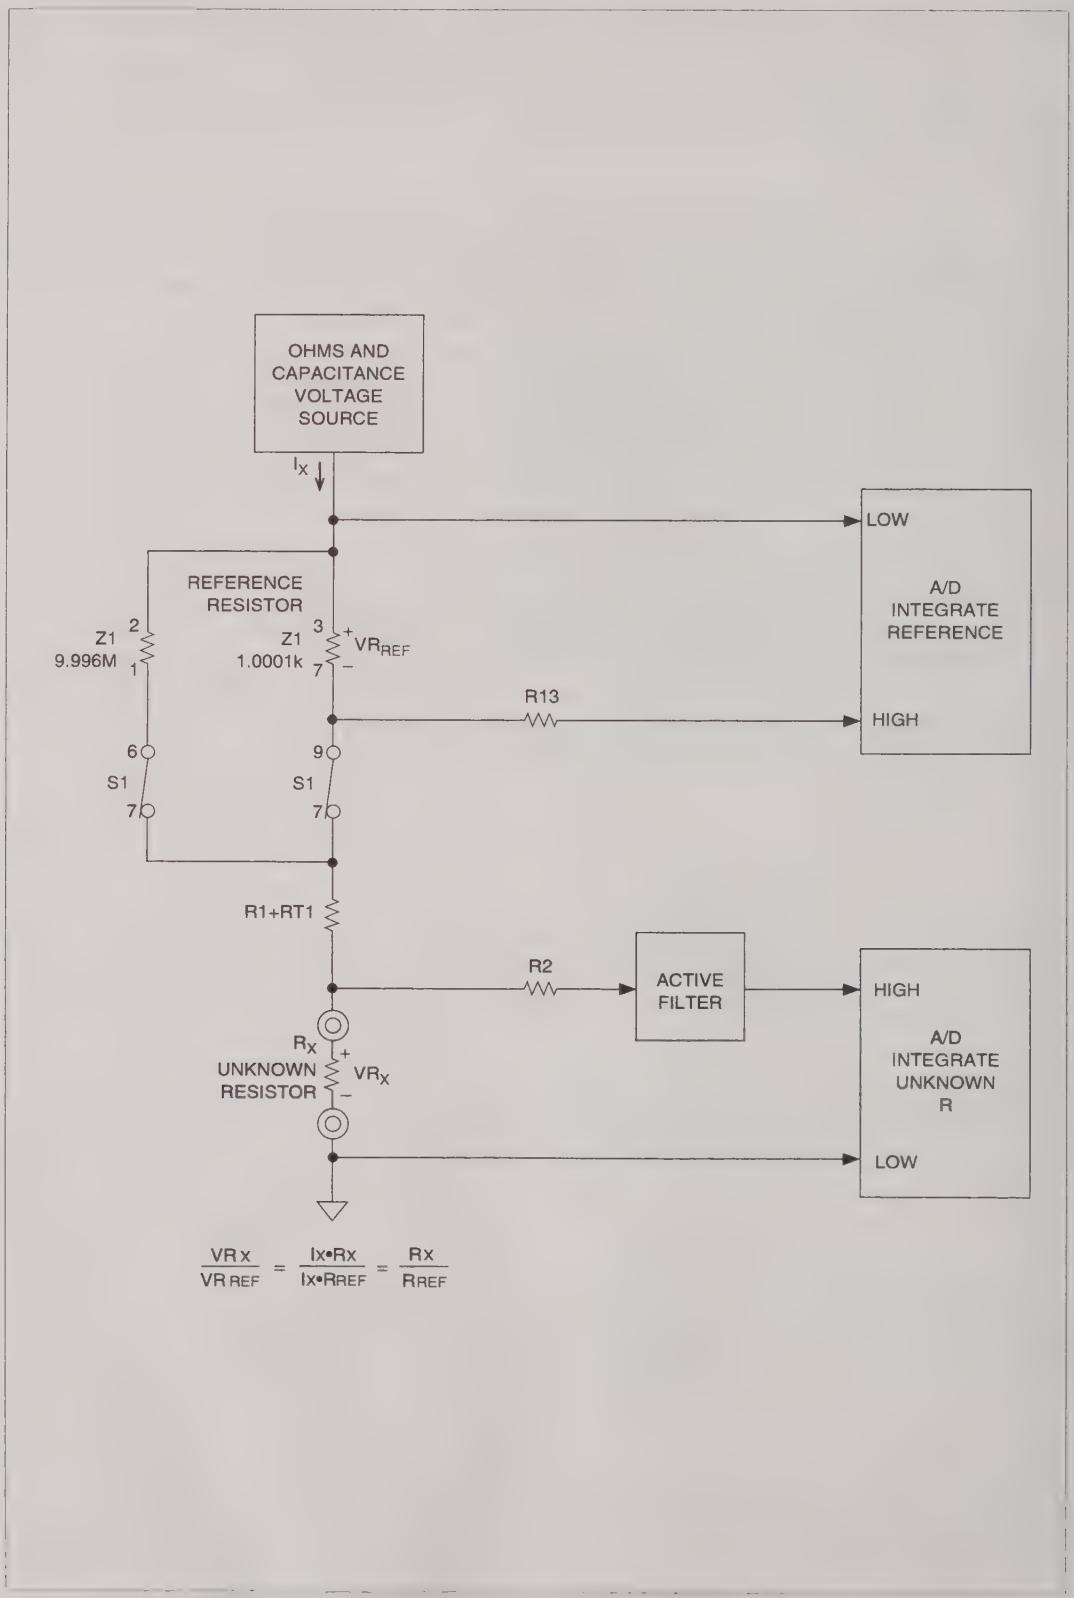

Figure 2-3. 400-Ohm Range Simplified Schematic

For the 4-kΩ range, the 10.010-kΩ resistor (Z1-5) used in parallel with the 9.996-MΩ resistor (Z1-2) forms a 10-kΩ reference resistor. For the 40-kΩ range, 101.01 kΩ (Z1-4) and 9.996 MΩ form a 100-kΩ reference resistor. And for the 400-kΩ range, 1.1111 MΩ (Z1-3) and 9.996 MΩ provide a 1-MΩ reference resistor. The 4-MΩ and 40-MΩ ranges use the 9.996-MΩ resistor alone.

CURRENT FUNCTIONS 2-9.

Input current through R5+R6 (for mA) or R6 (for amps) develops a voltage that is proportional to the input. The dc voltage is routed to the active filter and a/d converter inside U4. The ac voltage is routed to the ac buffer, ac converter, active filter, and a/d converter. The 4-mA dc and 4A dc ranges use the a/d converter 40-mA range. The 4-mA ac and 4A ac ranges use the times 10 ac buffer range.

CONTINUITY, LOW OHMS AND DIODE TEST FUNCTIONS 2-10.

Q13 provides the source current for the continuity, low ohms and diode test functions. Inputs are sensed through R2. R2 and R62 form a 10:1 divider for measuring voltages in diode test and the 8-kΩ range of low ohms. The continuity function is the 400-ohm range of low ohms, and uses a comparator to turn on the beeper when the input drops below about 30 ohms. Low ohms makes voltage measurements of the input to provide the higher resolution readings of the 40-ohm range. Diode test also makes voltage measurements of the input. A single beep sounds when the input drops below about 0.75v; a continuous tone sounds for inputs below about 60 mV.

Analog Section of Integrated Multimeter IC (U4) 2-11.

The a/d converter, autorange switching, frequency comparator, and most of the remaining analog circuitry are contained in the analog section of U4. Peripherals to this U4 analog section include the crystal clock, the system reference voltage, and the filter and amplifier resistors and capacitors.

U4 uses the dual-rate, dual-slope a/d converter circuit shown in Figure 2-4, A/D Converter. For most measurements, the basic a/d conversion cycle is 25 ms, for a rate of 40 measurements per second. A single conversion at this rate is called a minor cycle sample. Each minor cycle sample is used to provide updates at a rate of 40 per second for the fast response bar graph display, and fast autoranging.

Eight minor cycle samples are necessary to accumulate data for displaying a full-resolution (4000-count full scale) measurement on the digital display. A 40-ms autozero phase occurs following every eight-sample sequence. Therefore, each digital display update requires 240 ms, approximating four updates per second.

Basic a/d conversion elements and waveforms are illustrated in Figure 2-4, A/D Converter. A voltage level proportional to the unknown input signal charges (integrates) integrator capacitor C11 for an exact amount of time. This capacitor is then discharged by a reference voltage of opposite polarity. The discharge time, which is proportional to the level of the unknown input signal, is measured by the digital circuits in U4 and sent to the display.

Basic timing for the a/d converter is defined as a series of eight integrate and read (de-integrate) cycles, followed by a 40-ms autozero phase. However, the 40-MΩ, capacitance, overload recovery, autoranging, and Touch Hold® modes all require variations from the basic timing.

® Touch Hold is a registered trademark of the Fluke Corporation

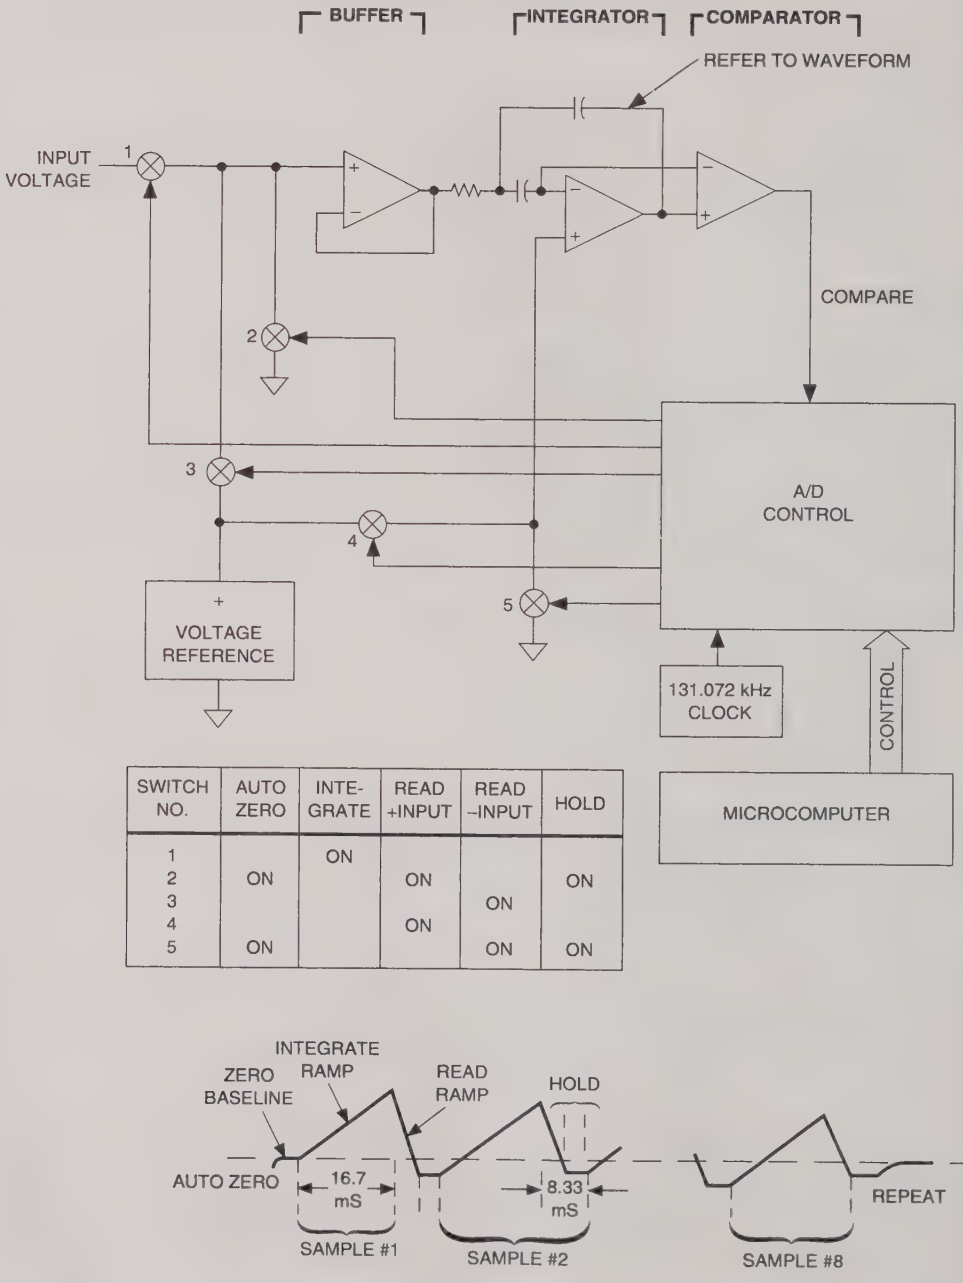

SWITCH NO.	AUTO ZERO	INTE-GRATE	READ +INPUT	READ –INPUT	HOLD
1		ON			
2	ON		ON		ON
3				ON	
4			ON		
5	ON			ON	ON

Figure 2-4. A/D Converter

CAPACITANCE MEASUREMENTS 2-12.

Refer to Figure 2-5, 100-nF Range Simplified Schematic. Capacitance measurements to 10,000 µF are made by measuring the charge required to change the voltage across the unknown capacitor from zero to the system reference voltage. This technique is referred to as a ballistic type of measurement, the configuration of which is the same as for ohms. The unknown capacitor is discharged through the 1.0001k ohm resistor of Z1, then charged during the a/d converter integrate cycle through the appropriate Z1 resistor. The voltage drop across the Z1 resistor is integrated by the a/d converter. During the a/d read cycle, the charge is held on the capacitor, and a count is accumulated. The microcomputer calculates a display value from the latched count, the capacitor is discharged, and the cycle repeats.

FREQUENCY MEASUREMENTS 2-13.

A voltage comparator is used for both signal detection in frequency mode and threshold detection in continuity mode. In frequency mode, digital pulses from the voltage comparator are routed to the counter. Pressing the range push button while in frequency mode causes a range change in the primary function (ac volts) that may change the sensitivity.

Microcomputer Control 2-14.

A microcomputer, integrated within U4, controls the various instrument functions and drives the display. The position of the rotary switch, S1, is decoded by the microcomputer from the three inputs F0, F1, and F2. All function modes, input ranging, signal routing, active filter enable, a/d timing and mode are controlled by the microcomputer.

The Touch Hold mode is a secondary software function. This means that the microcomputer performs a different control algorithm on the data. When the Touch Hold function is selected, the microcomputer does not allow a full resolution conversion to be completed unless the input signal is stable. When a stable reading occurs, the conversion is completed, and the microcomputer generates and freezes the corresponding display. The microcomputer now waits for a change in the signal to exceed a certain threshold, then begins watching for a stable reading again. Note that a reading is forced when the Touch Hold function is first selected. Also, open test lead signals generally do not update the display.

The SMOOTHING™ mode is another secondary software function. In the Smoothing function, the equivalent of eight readings are averaged, resulting in a more stable display of noisy input signals.

Peripherals to U4 2-15.

In addition to input overload protection and input signal conditioning circuits, other devices peripheral to U4 are needed to support the meter's features. The ac converter, active filter, and a/d converter circuits require off-chip resistors and capacitors. Digital drive and level-shifting circuits are needed for the beeper drive. A voltage reference is generated separate from U4, and some discrete resistors and transistors support the power supply.

AC BUFFER 2-16.

The ac buffer can be configured for an ac gain of 1 or 10. R14 and R15 provide for the X10 gain. C5 blocks any dc gain and provides a driven guard voltage. The ac buffer drives the frequency comparator.

™ SMOOTHING is a trademark of the Fluke Corporation

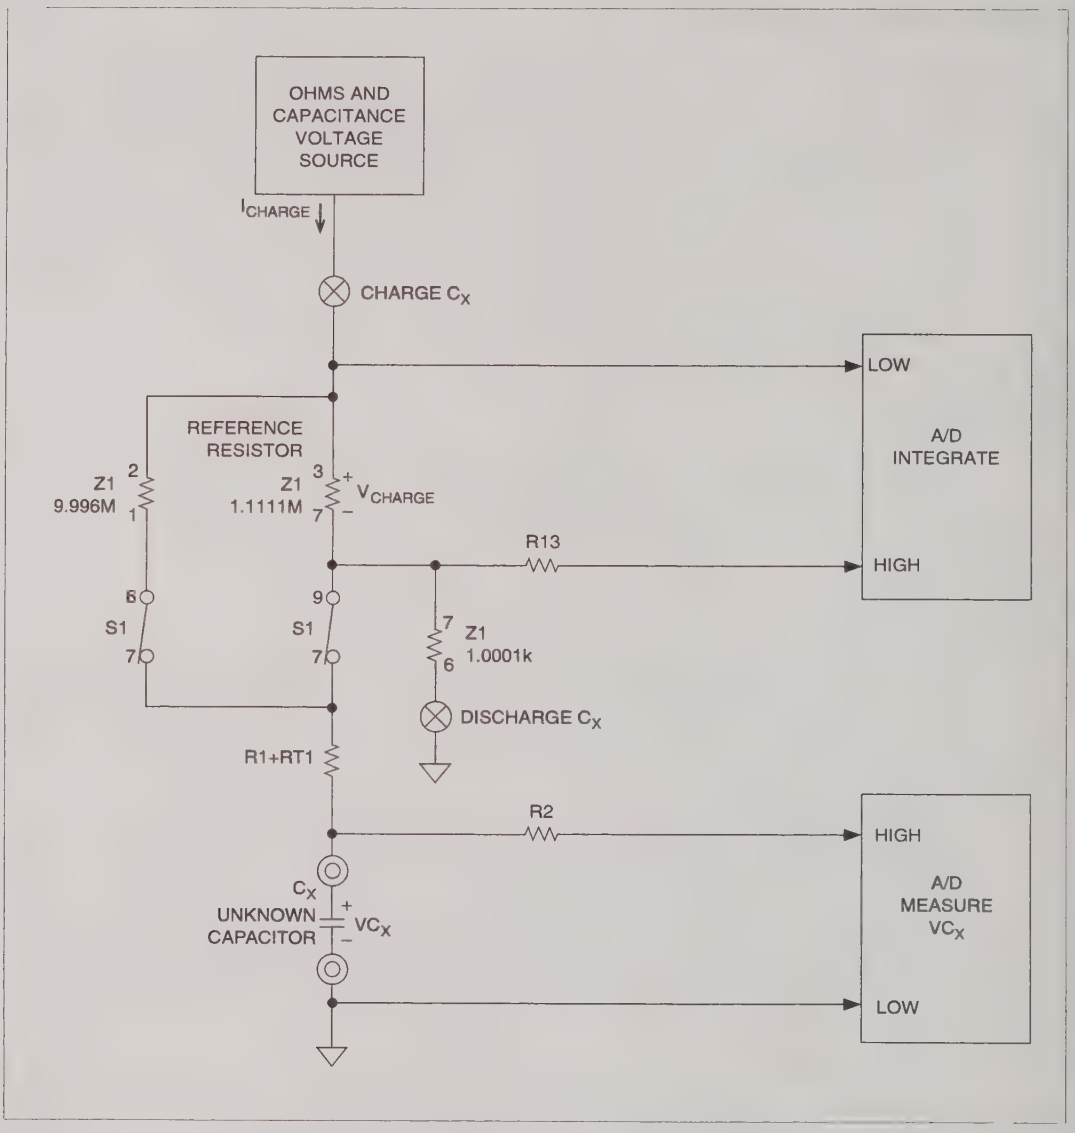

Figure 2-5. 100-nF Range Simplified Schematic

AC CONVERTER 2-17.

The averaging ac converter uses components R30, R31, R34, R40, C24, C28, and C29. This ac converter is a full-wave rectifying converter with a differential output, and it is gain selected to give a dc output equal to the rms value for a sine wave input. Filtering is provided by C28 and C29.

ACTIVE FILTER 2-18.

The active filter uses components R17, R18, C8, and C9. The active filter is a second order low-pass filter with two poles at 5.9 Hz in normal mode. It filters input signal noise and ac ripple from the ac converter, yielding stable a/d converter readings. The microcomputer can disable the filter completely or enable the filter fast response mode by shorting R17 and R18 with internal IC switches.

A/D CONVERTER 2-19.

Precision resistor network Z1-8, 9, and 10 connects to the three a/d buffer/integrator range resistors. Z1-8 connects to 190 kΩ for the 1-volt range (de-integrate). Z1-9 connects to 166 kΩ for the 400-mV range, and Z1-10 connects to 16 kΩ for the 40-mV range. Z1-11 is the summing node of the integrator circuit. The autozero capacitor (C10) stores op amp and comparator offsets. The integrator capacitor is C11.

The system reference voltage (1.23V) is generated by VR1 and R44. The 1.000V reference voltage for the a/d converter is supplied through U4-1 (REFI). This voltage is adjusted by R21, the dc calibration potentiometer in conjunction with R19 and R20. In addition to generating the a/d reference, the VR1 voltage is used for power supply reference, voltage comparator offset generation, and the ohms and capacitance source voltage.

BEEPER 2-20.

Devices Q9, Q11, R57, R63, and R64 make up the beeper drive circuit.

POWER SUPPLY 2-21.

The power supply consists of two regulators, one shunt and one series, which set Vdd at +3.0V and Vss at -3.2V for all battery voltages down to 6.5V. The shunt (common) regulator sets |Vdgnd - Vss| (Vdgnd = COM = 0V) and consists of an op amp and current shunt devices integrated on U4. Resistors R37 and R38 provide voltage division. The series (Vdd) regulator, which sets |Vdd-Vdgnd|, is made up of another on-chip op amp, along with devices Q3, R24, and R25. Q3 is the series regulator element, and R24 and R25 are for voltage sensing. Capacitors C14 and C21 provide circuit compensation and power supply decoupling for the shunt and series regulators, respectively. Q10 provides base drive for Q3 at turn on. Voltage level information is presented in Table 2-1.

Display 2-22.

The liquid-crystal display (LCD) operates under control of the microcomputer. Segments are driven by the computer and displayed on the LCD. Both digital readings and an analog bar-graph display are presented in conjunction with annunciators and decimal points. Refer to the Fluke 79/29 User's Manual for information about the display.

Table 2-1. Typical Voltage Levels and Tolerance (Referenced to Common)

VDD	3.0 ±0.2
VSS	-3.2 ±0.2
VBT-	-6.1 (battery at full 9V charge)
	-3.2 (battery at low charge of 6.5V)
REFH	1.23 ±0.04
PS0	1.23 ± 0.15
PS1	0 ±0.15
VOA	2.2 to 1.7 (referenced from VSS)
VOB	1.07 to .85 (referenced from VSS)

static awareness

A Message From
Fluke Corporation

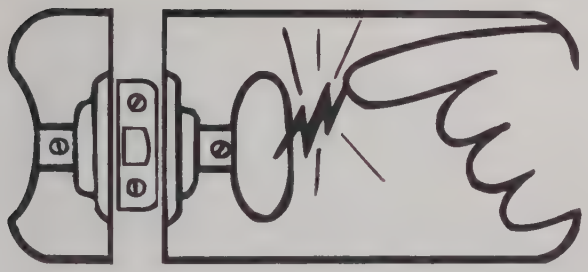

Some semiconductors and custom IC's can be damaged by electrostatic discharge during handling. This notice explains how you can minimize the chances of destroying such devices by:

1. Knowing that there is a problem.
2. Leaning the guidelines for handling them.
3. Using the procedures, packaging, and bench techniques that are recommended.

The following practices should be followed to minimize damage to S.S. (static sensitive) devices.

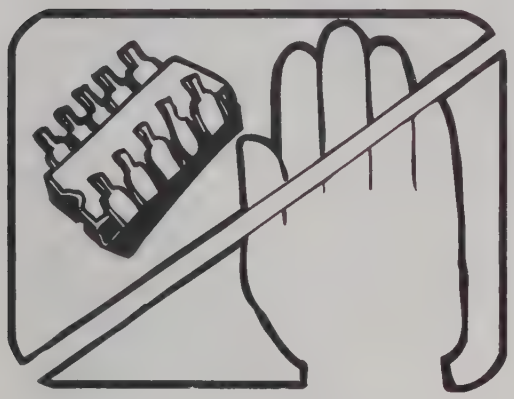

1. MINIMIZE HANDLING

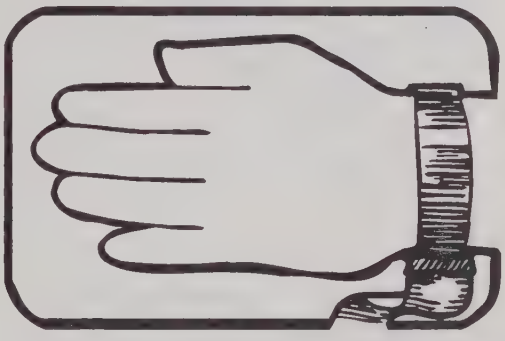

3. DISCHARGE PERSONAL STATIC BEFORE HANDLING DEVICES. USE A HIGH RESISTANCE GROUNDING WRIST STRAP.

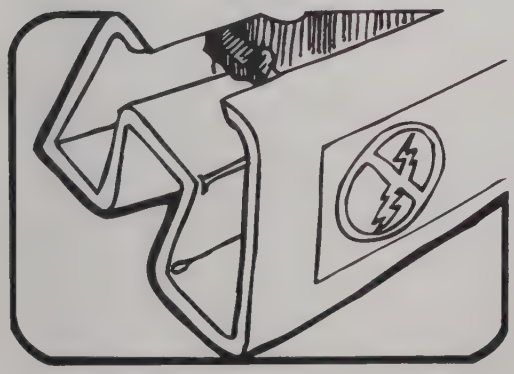

2. KEEP PARTS IN ORIGINAL CONTAINERS UNTIL READY FOR USE.

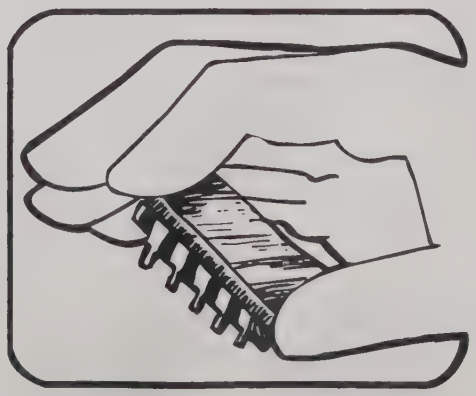

4. HANDLE S.S. DEVICES BY THE BODY.

5. USE STATIC SHIELDING CONTAINERS FOR HANDLING AND TRANSPORT.

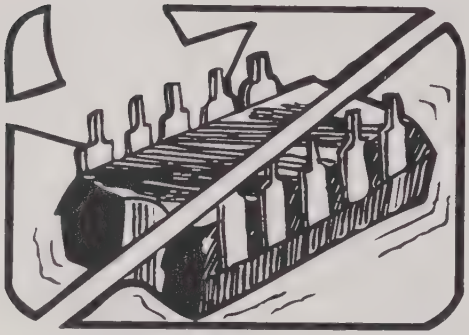

6. DO NOT SLIDE S.S. DEVICES OVER ANY SURFACE.

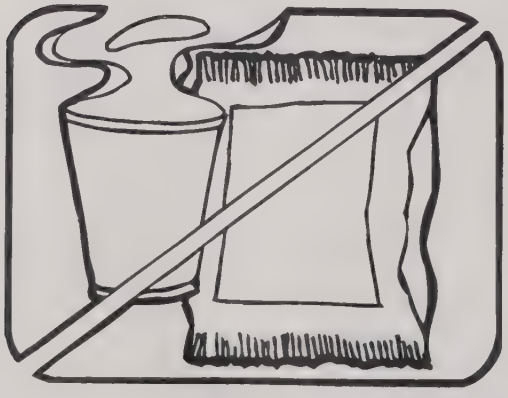

7. AVOID PLASTIC,VINYL AND STYROFOAM® IN WORK AREA.

PORTIONS REPRINTED
WITH PERMISSION FROM TEKTRONIX INC.
AND GENERAL DYNAMICS, POMONA DIV.

® Dow Chemical

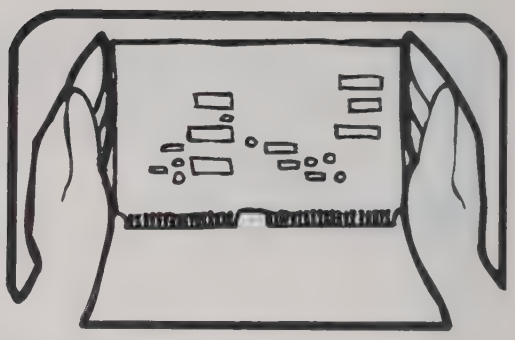

8. WHEN REMOVING PLUG-IN ASSEMBLIES HANDLE ONLY BY NON-CONDUCTIVE EDGES AND NEVER TOUCH OPEN EDGE CONNECTOR EXCEPT AT STATIC-FREE WORK STATION. PLACING SHORTING STRIPS ON EDGE CONNECTOR HELPS PROTECT INSTALLED S.S. DEVICES.

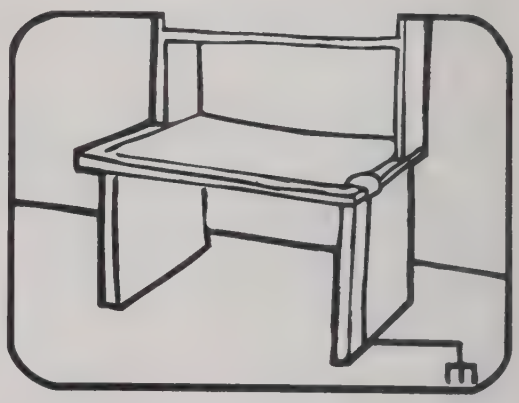

9. HANDLE S.S. DEVICES ONLY AT A STATIC-FREE WORK STATION.

10. ONLY ANTI-STATIC TYPE SOLDER-SUCKERS SHOULD BE USED.

11. ONLY GROUNDED-TIP SOLDERING IRONS SHOULD BE USED.

Chapter 3
Maintenance

CONTENTS PAGE

3-1. INTRODUCTION 3-3
3-2. RECOMMENDED EQUIPMENT 3-3
3-3. OPERATOR MAINTENANCE 3-4
3-4. Case Disassembly 3-4
3-5. Battery Replacement 3-4
3-6. Fuse Test 3-4
3-7. Fuse Replacement 3-4
3-8. Circuit Assembly Removal 3-6
3-9. Display Access 3-6
3-10. CLEANING 3-6
3-11. PERFORMANCE TESTS 3-7
3-12. Setup 3-7
3-13. Display Test 3-7
3-14. DC Voltage Test 3-8
3-15. mV DC Test 3-8
3-16. AC Voltage Test 3-9
3-17. Frequency Test 3-9
3-18. Ohms Test 3-9
3-19. Capacitance Test 3-10
3-20. Continuity Test 3-11
3-21. Diode Test 3-11
3-22. DC and AC Current Test 3-11
3-23. CALIBRATION 3-12
3-24. TROUBLESHOOTING 3-13
3-25. Surface Mount Assemblies 3-13
3-26. Power Supply Related Troubleshooting 3-14
3-27. Common (Shunt) Regulator Troubleshooting 3-15
3-28. Vdd (Series) Regulator Troubleshooting 3-15

WARNING

THESE SERVICE INSTRUCTIONS ARE FOR USE BY QUALIFIED PERSONNEL ONLY. TO AVOID ELECTRIC SHOCK, DO NOT PERFORM ANY SERVICING OTHER THAN THAT CONTAINED IN THE USER'S OR SERVICE MANUAL UNLESS YOU ARE QUALIFIED TO DO SO.

INTRODUCTION 3-1.

This section contains maintenance information for the Fluke 79 and 29 meters and includes performance tests, calibration, general maintenance procedures, and troubleshooting. For operator maintenance and instrument specifications, refer to the User's Manual (P/N 896196).

The performance tests are recommended as a preventive maintenance tool to verify proper instrument operation. A one year calibration cycle is recommended to maintain the specifications given in the Users Manual.

RECOMMENDED EQUIPMENT 3-2.

Test equipment recommended for the performance tests and calibration is listed in Table 3-1. If the recommended equipment is not available, instruments with equivalent specifications may be used.

Table 3-1. Recommended Test Equipment

EQUIPMENT	MINIMUM SPECIFICATIONS	RECOMMENDED MODEL
DMM Calibrator plus Transconductance or Power Amplifier	DC Voltage: 0-1000V Accuracy: .05% AC Voltage: 0-750V Accuracy: 0.2% Frequency: 40Hz-20 kHz DC mA: 0-35 mA DCA: 0-10A Accuracy:0.1% AC mA: 0-35 mA ACA: 0-10A Accuracy: 0.3% Frequency: 40Hz-1 kHz	Fluke Models (5100B, 5101B, 5102B, 5700A) + 5220A or Fluke Models 5700A + 5725A
Function Generator	Sinewave voltage: 0-1V rms Frequency: 1Hz-20 kHz Frequency Accuracy: .002%	Philips 5190X
Decade Resistor	Resistance 0-35 MΩ: Accuracy: .05%	General Resistance RDS-77B
Decade Capacitor	Capacitance: 100 pF-1.1 µF Accuracy: 0.5%	GenRad 1412-BC

OPERATOR MAINTENANCE 3-3.

WARNING

TO AVOID ELECTRICAL SHOCK, REMOVE THE TEST LEADS BEFORE OPENING THE CASE, AND CLOSE THE CASE BEFORE OPERATING THE METER. TO PREVENT FIRE, INSTALL FUSES WITH THE RATING SHOWN ON THE BACK OF THE METER.

CAUTION

To avoid contamination with oil from the fingers, handle the pca by the edges or wear gloves. PCA contamination may not cause immediate instrument failure in controlled environments. Failures typically show up when contaminated units are operated in humid areas.

Case Disassembly 3-4.

Use the following procedure to disassemble the case:

1. Set the function switch to OFF and disconnect the test leads if they are installed.
2. Remove the four Phillips screws from the bottom cover.
3. Turn the meter face up, grasp the top cover, and pull the top cover from the meter.

Battery Replacement 3-5.

The meter is powered by a single 9V battery (NEDA 1604, 6F22, or 006P). Refer to Figure 3-1, and use the following procedure to replace the battery:

1. Remove the upper case as described under Case Disassembly.
2. Lift the battery from the case bottom and install the new battery.

Fuse Test 3-6.

Use the following procedure to test the internal fuses of the meter.

1. Turn the rotary selector switch to the Ω [K:CAP] position.
2. Plug a test lead into the VΩ⊣◀ input terminal, and touch the probe to the 10A input terminal.
3. The display should indicate between 0.1 and 0.5 ohms. This tests F2 (15A, 600V). If the display reads OL (overload), replace the fuse and test again. If the display reads any other value, further servicing is required.
4. Move the probe from the 10A input terminal to the 40 mA input terminal.
5. The display should read between 10 ohms and 12 ohms. This procedure tests F1 (1A, 600V). If the display reads a high resistance or OL (overload), replace the fuse and test again. If the display reads any other value, further servicing is required.

Fuse Replacement 3-7.

Refer to Figure 3-1, and use the following procedure to examine or replace the meter's fuses:

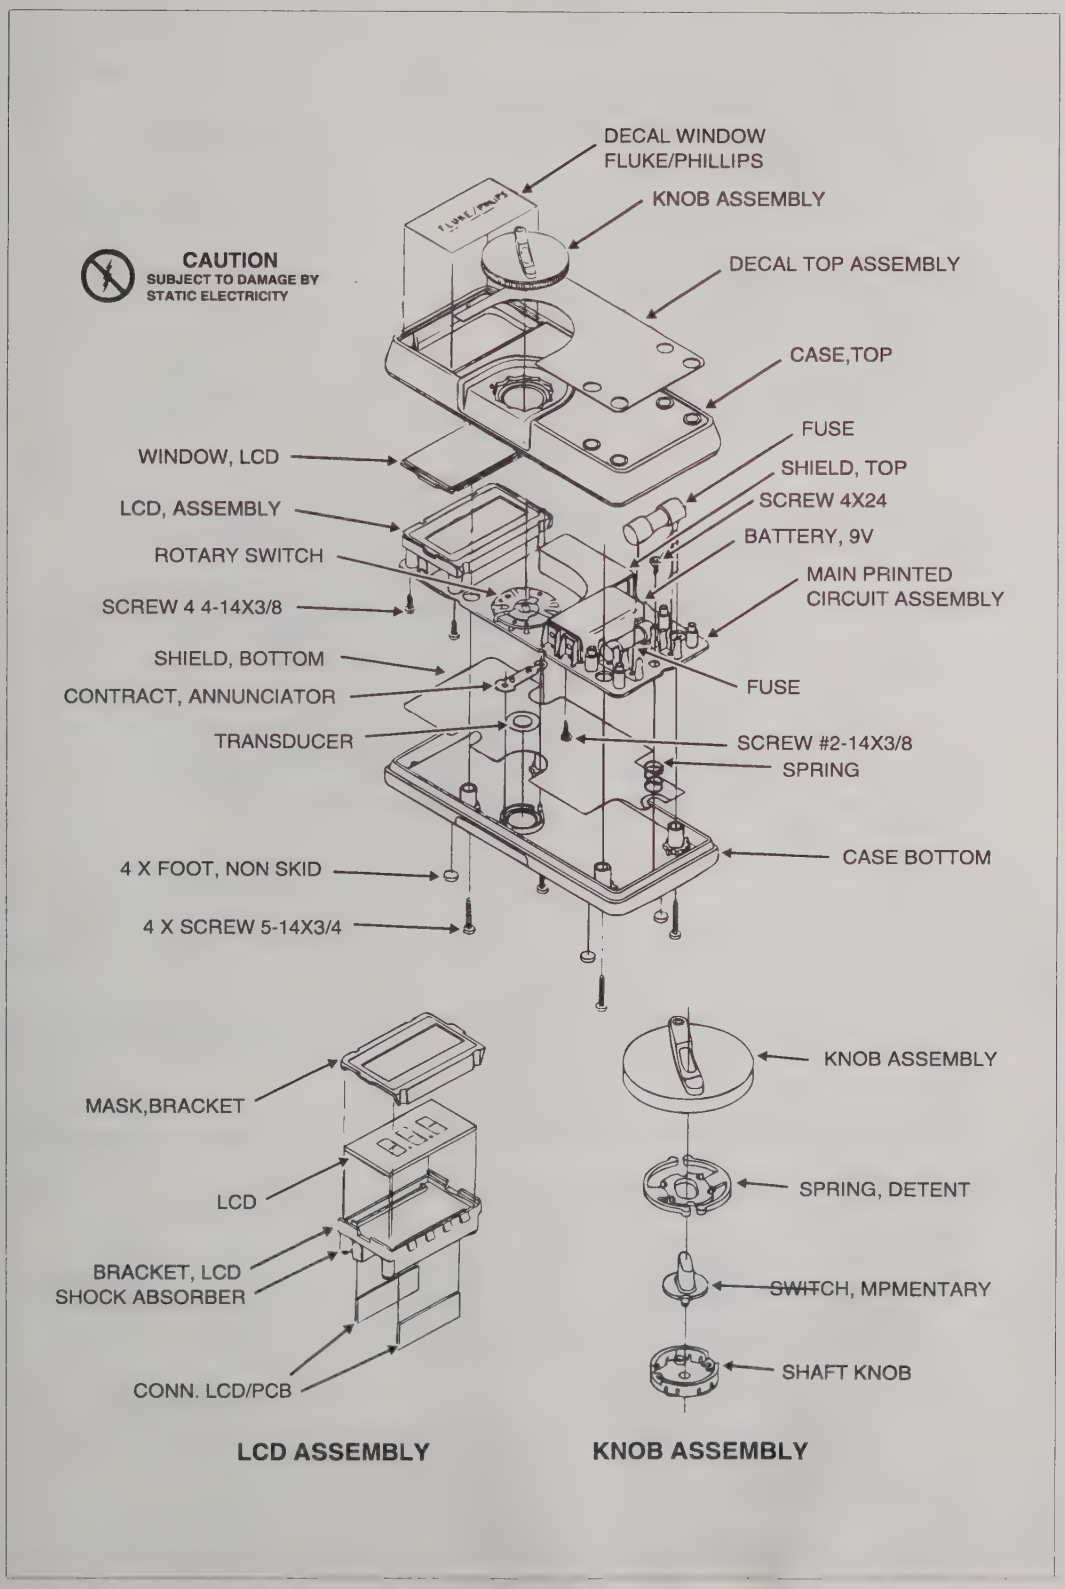

Figure 3-1. Assembly Details

1. Remove the upper case.
2. Remove the defective fuse by gently prying one end of the fuse loose and sliding the fuse out of the fuse bracket.
3. Install a new fuse of the same size and rating. Make sure the new fuse is centered in the fuse holder.
4. Ensure that the case top rotary switch and circuit board switch are in the OFF position.
5. Reinstall the four Phillips screws into the bottom cover.

Circuit Assembly Removal 3-8.

1. The 15A fuse, F2, must be removed to access the screw that holds the pca to the case bottom (refer to Fuse Replacement, above).

NOTE

Be careful not to lose the spring located directly under the screw on the back side of the pca.

2. The pca may now be removed from the bottom cover.

Display Access 3-9.

CAUTION

To prevent contamination, do not handle the conductive edges of the LCD interconnects. If they are contaminated, clean them with alcohol.

Refer to Figure 3-1.

1. Remove the four Phillips screws from the back side of the pca.
2. Remove the LCD mounting bracket.
3. Insert a small screwdriver under the edges of the display holding bracket, and gently pry the bracket loose from the snaps.
4. Turn the bracket upside down to remove the LCD.
5. Before installing a new LCD, make sure that all connector contact points are clean.

CLEANING 3-10.

CAUTION

To avoid damaging the meter, do not use aromatic hydrocarbons or chlorinated solvents for cleaning. These solutions will react with the plastics used in the instruments.

Do not allow the LCD to get wet. Remove the display assembly before washing the pca and do not reinstall it until the pca is completely dry.

Do not use detergent of any kind for cleaning the pca.

Do not remove lubricants from the switch when cleaning the pca.

Clean the instrument case with a mild detergent and water.

The pca may be washed with isopropyl alcohol or deionized water and a soft brush. Remove the display assembly and fuses before washing, and avoid washing the switch if possible. Dry the pca with clean dry air at low pressure, then bake it at 50°C for 24 hours.

PERFORMANCE TESTS 3-11.

Performance tests are recommended for incoming inspection, periodic maintenance, and for verifying the specifications in the Users Manual. If the instrument fails any part of the test, calibration and/or repair is indicated.

In the performance tests, the Fluke 79 and 29 meters are referred to as the unit under test (UUT).

Setup 3-12.

1. Allow the UUT to stabilize to room temperature 23°C ± 5°C (73°F ± 9°F).

2. Check the fuses and battery, and replace them if necessary. (Refer to the battery and fuse replacement procedures in this section.)

WARNING

TO PREVENT FIRE, INSTALL FUSES IN ACCORDANCE WITH THE RATING SHOWN ON THE BACK OF THE METER.

WARNING

CONNECT THE GROUND/COMMON/LOW SIDE OF THE DC CALIBRATOR TO COMMON ON THE UUT.

Display Test 3-13.

To test the display, turn the UUT on and check whether all display segments come on as indicated in Figure 3-2.

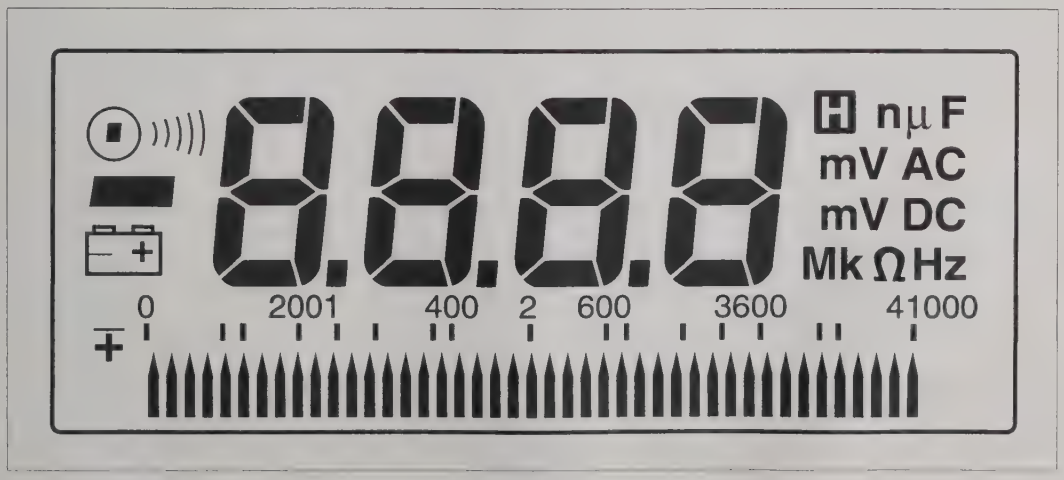

Figure 3-2. Display

DC Voltage Test 3-14.

1. Set the UUT function switch to V DC and connect the DC Voltage Calibrator output to the VΩ⊣◀ and COM input terminals of the UUT.

2. Referring to Table 3-2, set the DC Voltage Calibrator for the output indicated in steps 1 through 4 only. Verify that the UUT display reading is within the limits shown.

Table 3-2. DC Voltage Test

STEP	INPUT		DISPLAY READING
	RANGE	VOLTAGE	
1	4V	short	0 to ±.001 V DC
2	4V	+3.5V	3.488 to 3.512V DC
3	4V	-3.5V	-3.488 to -3.512V DC (and within 2 counts of +3.5V reading)
4	40V	+35V	34.88 to 35.12V DC
5	400V	+350V	348.8 to 351.2V DC
6	1000V	+1000V	996 to 1004V DC

3. Reset the source to 0V.

mV DC Test 3-15.

1. Set the UUT function switch to mV DC, and connect the DC Voltage Calibrator output to the VΩ⊣◀ and COM input terminals of the UUT.

NOTE

For autorange, press and hold the push button for 1 second.

2. Referring to Table 3-3, set the DC Voltage Calibrator to the voltage indicated in the steps. Verify that the UUT display reading is within the limits shown.

Table 3-3. mV DC Voltage Test

STEP	INPUT		DISPLAY READING
	RANGE	VOLTAGE	
1	400 MV	+350 MV	348.8 TO 351.2 MV DC
2	40 MV	SHORT	0 TO ±.05 MV DC
3	40 MV	+35 MV	34.84 TO 35.16 MV DC
4	40 mV	-35 mV	-34.84 to -35.16 mV DC

3. Reset the source to 0V.

AC Voltage Test 3-16.

WARNING

INJURY HAZARD. CONNECT THE GROUND/COMMON/LOW SIDE OF THE AC CALIBRATOR TO COMMON ON THE UUT.

1. Set the UUT function switch to V AC, and connect the AC Calibrator to the VΩ⊣◀ and COM input terminals.
2. Set the AC Calibrator for the output given in Table 3-4, and verify that the UUT display reading is within the limits shown.

Table 3-4. AC Voltage Test

STEP	INPUT			DISPLAY READING
	RANGE	VOLTAGE	FREQ.	
1	400 mV	short	----	0 to 0.4 mV AC
2	400 mV	350 mV	100 Hz	342.9 to 357.1 mV AC
3	400 mV	350 mV	1 kHz	342.9 to 357.1 mV AC
4	4V	short	----	0 to .002V AC
5	4V	3.5V	100 Hz	3.431 to 3.569V AC
6	4V	3.5V	1 kHz	3.431 to 3.569V AC
7	40V	35V	1 kHz	34.63 to 35.37V AC
8	400V	350V	1 kHz	346.3 to 353.7V AC
9	750V	750V	1 kHz	740 to 760V AC

NOTE

When the input is open in the V AC function, it is normal for the meters to read some counts on the display. This is due to ac pickup in the ac amplifier when the ac amplifier is unterminated.

Frequency Test 3-17.

1. Set the UUT function switch to Hz and connect the Function Generator output to the VΩ⊣◀ and COM input terminals of the UUT.
2. Referring to Table 3-5, set the Function Generator for the output indicated in the steps. Verify that the UUT display reading is within the limits shown.

Table 3-5. Frequency Test

STEP	INPUT			DISPLAY READING
	RANGE	VOLTAGE	FREQ.	
1	4V	300 mV	800 Hz	799.8Hz to 800.2Hz

Ohms Test 3-18.

1. Select the ohms function on the UUT.
2. Connect the Ohms Calibrator or Decade Resistor to the VΩ⊣◀ and COM input terminals of the UUT.

3. Referring to Table 3-6, set the Decade Resistor or Ohms Calibrator to the resistance value indicated in steps 1 through 7. Verify that the display reading is within the limits shown.

Table 3-6. Resistance Test

STEP	RANGE	INPUT RESISTANCE	DISPLAY READING
1	400Ω	short	0 to 0.2Ω
Decades of 1:			
2	400Ω	100Ω	99.4 to 100.6Ω (plus 0 reading)
3	4 kΩ	1 kΩ	.995 to 1.005 kΩ
4	40 kΩ	10 kΩ	9.95 to 10.05 kΩ
5	400 kΩ	100 kΩ	99.5 to 100.5 kΩ
6	4 MΩ	1 MΩ	.995 to 1.005 MΩ
7	40 MΩ	10 MΩ	9.87 to 10.13 MΩ
Decades of 1.9:			
2	400Ω	190Ω	189.0 to 191.0Ω (plus 0 reading)
3	4 kΩ	1.9 kΩ	1.891 to 1.909 kΩ
4	40 kΩ	19 kΩ	18.91 to 19.09 kΩ
5	400 kΩ	190 kΩ	189.1 to 190.9 kΩ
6	4 MΩ	1.9 MΩ	1.891 to 1.909 MΩ
7	40 MΩ	19 MΩ	18.78 to 19.22 MΩ
Decades of 3.5:			
2	400Ω	350Ω	348.4 to 351.6Ω (plus 0 reading)
3	4 kΩ	3.5 kΩ	3.485 to 3.515 kΩ
4	40 kΩ	35 kΩ	34.85 to 35.15 kΩ
5	400 kΩ	350 kΩ	348.5 to 351.5 kΩ
6	4 MΩ	3.5 MΩ	3.485 to 3.515 MΩ
7	40 MΩ	35 MΩ	34.62 to 35.38 MΩ

Capacitance Test 3-19.

1. Set the UUT function switch to Ω ⊣⊢ and connect the Decade Capacitor output to the VΩ⊣⊢ and COM input terminals of the UUT.

NOTE

To enter capacitance, press and hold the push button for 2 seconds.

2. Referring to Table 3-7, set the Decade Capacitor for the output indicated in the steps. Verify that the UUT display reading is within the limits shown.

Table 3-7. Capacitance Test

STEP	INPUT		DISPLAY READING
	RANGE	CAPACITANCE	
1	100nF	open, no test leads	0 to 0.50nF
2	1000nF	open, no test leads	0 to 0.5nF
3	1000nF	800nF	784.6 to 815.4nF
4	10\µF	1.1\µF	1.077 to 1.123\µF

Continuity Test 3-20.

1. Set the UUT function switch to 40Ω ( ))).
2. Referring to Table 3-8, apply a short as indicated. Verify that the UUT display and beeper indicate as shown.

Table 3-8. Continuity Test

STEP	RANGE	INPUT	DISPLAY READING
1	400Ω	short	tone
2	400Ω	open	OL

Diode Test 3-21.

1. Set the UUT function switch to 40 Ω))) —|(— and enter diode test by holding the push button for 2 seconds.
2. Verify that the display shows OL when the test leads are open and that the meter emits a tone when the test leads are shorted together.

DC and AC Current Test 3-22.

1. Set the output of the Current Calibrator to standby and connect it to the 40 mA and Common input terminals of the UUT.
2. Set the Current Calibrator to the output shown in Table 3-9, and verify that the UUT display reading is within the limits shown.

Table 3-9. DC and AC mA Test

STEP	INPUT			DISPLAY READING
	RANGE	A	FREQ	
1	40 mA dc	+35 mA		34.80 to 35.20 DC
NOTE To enter AC mA, press and hold button for 2 seconds.				
2	40 mA ac	35 mA	1kHz	34.45 to 35.55 mA AC

3. Set the output of the Current Calibrator to standby and connect it to the 10A and Common input terminals of the UUT.
4. Return the UUT to A DC.
5. Set the Current Calibrator to the output shown in Table 3-10, and verify that the UUT display reading is within the limits shown.

Table 3-10. DC Amps Test

STEP	INPUT		DISPLAY READING
	RANGE	A	
2	10A dc	+10A	9.93 to 10.07 DC

CALIBRATION 3-23.

Calibrate the meter once a year to ensure that it performs according to specifications. Calibration adjustment points are identified in Figure 3-3.

Use the following procedure to calibrate the Fluke 79/29.

1. Set the DC Voltage Calibrator to 0 volts.
2. Select the $\overline{\text{V}}$ function on the meter.
3. Connect the DC Voltage Calibrator to the VΩ⊣◀ and COM input terminals of the UUT.
4. Set the DC Voltage Calibrator for an output of +3.5V dc.
5. The UUT should display 3.500V dc ± 0.001. If necessary, remove the four case screws and top cover, and adjust R21 to obtain the proper display.
6. Set the UUT to the V~ function, and set the source for an output of 3.500V ac at 100Hz.
7. The UUT should display 3.500V ac ± 0.002. If necessary, remove the four case screws and top cover and adjust R34 to obtain the proper display.

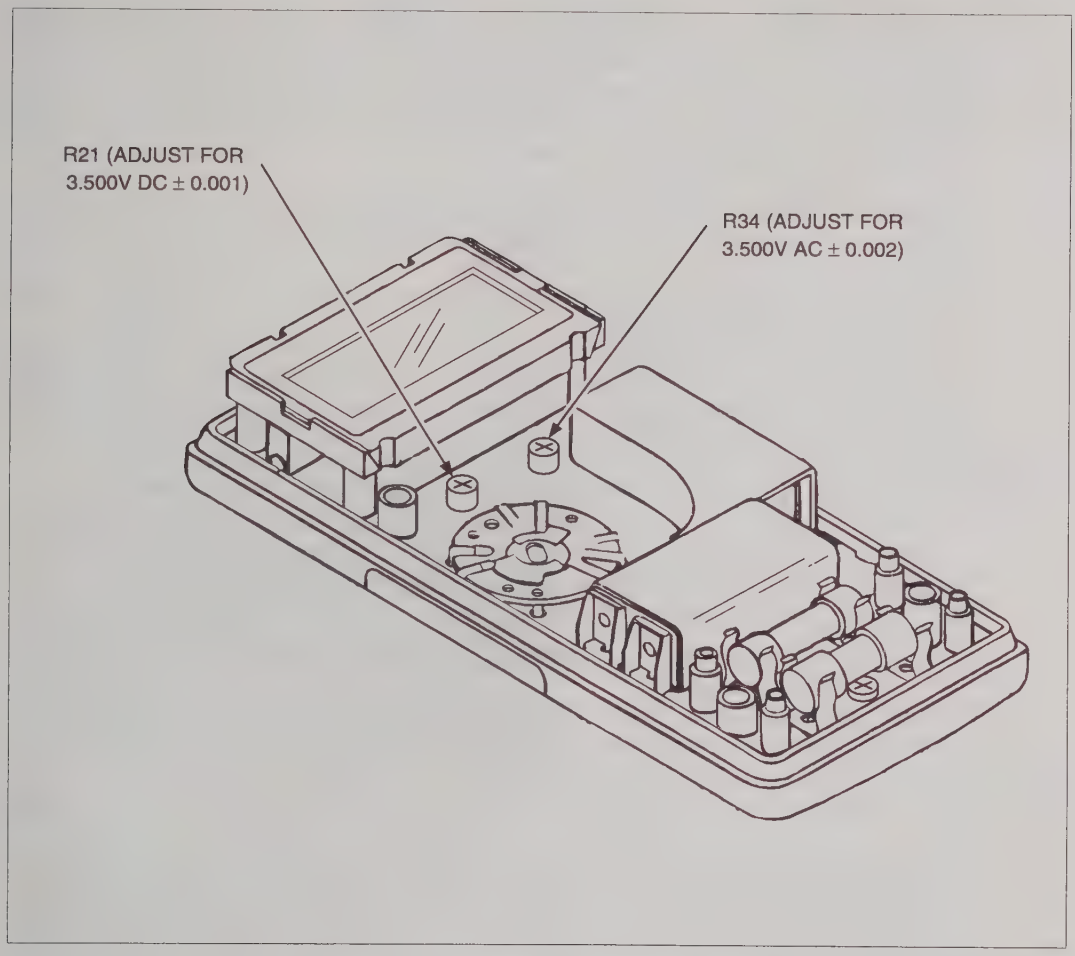

Figure 3-3. Calibration Adjustment Points

TROUBLESHOOTING 3-24.

The procedures provided in these paragraphs will help isolate problems with the meter. In these procedures, the meters are referred to as the unit under test (UUT).

When troubleshooting the Fluke 79 and 29 meters, use the precautions listed on the "Static Awareness Sheet" to prevent damage from static discharge.

Surface Mount Assemblies 3-25.

The 79 and 29 multimeters incorporate surface-mount technology (SMT) on the printed circuit assembly (pca). Surface-mount components are much smaller than their predecessors, with leads soldered directly to the surface of a circuit board; no plated through-holes are used. Unique servicing, troubleshooting, and repair techniques are required to support this technology. The information offered in the following paragraphs serves only as an introduction to SMT. We do not recommend that you attempt a repair based only on the information presented here.

Since sockets are seldom used with SMT, "shotgun" troubleshooting cannot be used; isolate a fault to the component level before replacing a part. Surface-mount assemblies are probed from the component side. The probes should contact only the pads in front of the component leads. With the close spacing involved, ordinary test probes can easily short two adjacent pins on an SMT IC.

Due to the limited space on the surface of the circuit board, component locations are not labeled. Therefore, this service manual is a vital source for component locations and values. Figures provided in Section 5 of this manual provide component location information. Also, remember that chip components are not individually labeled; keep any new or removed component in a labeled package.

Surface-mount components are removed and replaced by reflowing all the solder connections at the same time. Special considerations are required.

- The solder tool uses regulated hot air to melt the solder; there is no direct contact between the tool and the component.
- Surface-mount assemblies require rework with wire solder rather than with solder paste. A 0.025 inch diameter wire solder composed of 63% tin and 37% lead is recommended. A 60/40 solder is also acceptable.
- A good connection with SMT requires only enough solder to make a positive metallic contact. Too much solder causes bridging, while too little solder can cause weak or open solder joints. With SMT, the anchoring effect of the through-holes is missing; solder provides the only means of mechanical fastening. Therefore, the pca must be especially clean to ensure a strong connection. An oxidized pca pad causes the solder to wick up the component lead, leaving little solder on the pad itself.

Refer to the Fluke "Surface Mount Device Soldering Kit" for a list of special tools required to perform circuit assembly repair. (In the USA, call 1-800-526-4731 to order).

Power Supply Related Troubleshooting 3-26.

The two regulator circuits are interrelated; a malfunction in either the common regulator or the Vdd regulator may cause a problem in the other. Refer to Tables 3-11 and 3-12 for descriptions of power supply components and voltage levels. To isolate the problem regulator circuit, disconnect the battery, and drive Vdd - Vss = 6.2V with a power supply. This procedure tests the common regulator independently of the Vdd regulator.

Table 3-11. Functional Description of Power Supply Components

COMPONENT	FUNCTION
Q10	Power supply startup device. Q10 provides Q8 base startup current. Q10 is always off during meter operation.
VR1	VR1 provides the system reference voltage. It is used for the a/d converter reference and as a reference for both power supply regulators.
C14	Vdd regulator compensation and bypass.
C21	Common regulator compensation and Vss bypass.
C35	Battery bypass.
R24, R25	Vdd regulator voltage sensing resistors.
R37, R38	Common regulator voltage sensing resistors.
R44	Supplies bias current to VR1.

Table 3-12. Voltage Levels

VDD	3.0 ±0.2
VSS	3.2 ±0.2
VBT-	6.1 (battery at full 9V charge)
	3.2 (battery at low charge of 6.0V)
REFH	1.23 ±0.04
PS0	1.23 ± 0.15
PS1	0 ±0.15
VOA	2.2 to 1.7 (referenced from VSS)
VOB	1.07 to .85 (referenced from VSS)

Now check for Vdgnd - Vss = -3.2V ±0.2V. If this test is successful, the problem lies with the Vdd regulator; refer to Vdd Regulator Troubleshooting later in this section. If this test is not successful, the problem lies with the common regulator; continue with the Common Regulator Troubleshooting below.

Note that if the common regulator works or has been repaired, check both supplies with the 9V battery supply.

Common (Shunt) Regulator Troubleshooting 3-27.

To troubleshoot the common regulator, connect the power supply so that Vdd, Vss, and DGND (digital ground) are supplied from an external power supply. This procedure overdrives the large on-chip shunt transistors; the bias current from the power supply ranges from 10 mA to 100 mA. Refer to the schematic for a diagram of the common regulator. Make the following tests:

1. Check for +1.23V ±40 mV (Vrefh) at the cathode of VR1. If Vrefh is not correct, check VR1, R19, R20, R21 and R44 carefully. If Vrefh is still incorrect, U4 is bad.

2. If Vrefh is correct, measure the voltage at U4 pin 6 (PS1). If Vps1 is not equal to 0V ±0.15V, check R37 and R38. If Vps1 is still at an incorrect voltage, U4 is bad.

3. Check the bias generator circuit. With the exception of resistor R35 (620 kΩ), the bias generator (which sets the bias level for all U4 analog circuitry) is internal to U4. A problem with this circuit could cause the on-chip power supply op amps to fail. Measure the dc voltage between U4 pin 8 (Vbias) and DGND. If -0.2V < Vbias < +0.2V the bias generator is okay. If Vbias is not correct, check R35. If Vbias is still wrong, replace U4.

4. Measure the ac voltage between Vdgnd and Vss. If it is greater than 10 mV ac, check C21. (An open C21 causes common regulator instability.) The dc level may also be incorrect.

5. If the common regulator still does not work, circuitry internal to U4 is bad. Replace U4.

Vdd (Series) Regulator Troubleshooting 3-28.

If a problem still exists after the common regulator troubleshooting, continue with the following Vdd regulator troubleshooting. Often, a short or sneak current path causes power supply problems. Refer to the schematic for a diagram of the Vdd (Series) Regulator. Make the following tests:

1. Measure the dc operating current from the 9V battery. If the current is greater than 1.2 mA, a sneak current path exists. A sneak current path can be very difficult to find.

2. First, visually check for both solder bridges on U4 pins and other circuit board shorts.

Isolate the current path at the negative battery terminal (Vbt-). The components connected to Vbt- are C35, CR4, and R63. Remove these parts one at a time. Measure I(bat) after each removal to isolate the problem.

1. If the excess battery current stops after removing R63, either R63, R57, Q9, or Q11 may be bad.

2. If the extra current is still present with all parts removed, remove Q10 and check for excess battery current. If I(bat) is now correct, Q10 is bad. If I(bat) is still excessive, U4 is probably at fault.

If the power supply is not working but battery current is normal, perform the following tests.

1. If Vdd - Vss is low, a problem may exist with start-up device Q10. Check Q10 by momentarily connecting Vss to Vbt-. If both Vss and Vbt- now start up and operfate correctly, check Q10 for an open.

2. Measure the ac voltage between Vdd and Vss. An unstable Vdd regulator can be caused by an open C14. If the voltage is greater than 10-mV ac, check C14. The dc level may also be incorrect.

For a final check of U4, remove the battery and supply Vdd = +3.0V, Vdgnd = 0, and Vss = -3.2V from an external power supply. Measure the voltage at U4 pin 7 (Vps0). If it does not equal 1.23V ±0.15V, check R24 and R25 carefully. If Vps0 is still incorrect, U4 is bad.

Chapter 4
List of Replaceable Parts

CONTENTS

ASSEMBLY NAME	DRAWING NO.	TABLE		FIGURE	
		NO.	PAGE	NO.	PAGE
Final Assembly	FLUKE-79-2 T&B	4-1	4-4	4-1	4-5
A1 Main PCA	FLUKE-79-2-4001	4-2	4-7	4-2	4-8

INTRODUCTION 4-1.

This section contains an illustrated parts breakdown of the Fluke 79 and 29 Multimeters. Both electrical and mechanical parts are listed alphanumerically by reference designator or item number. Each listed component is shown in an accompanying illustration unless otherwise noted.

Parts lists include the following information:

- Reference designation or item number
- Description of each part
- Fluke part number
- Manufacturer's supply code
- Manufacturer's part number
- Total quantity of components per assembly

HOW TO OBTAIN PARTS 4-2.

Components may be ordered from the Fluke Corporation factory or authorized representative listed in the User's Manual by using the Fluke part number. In the U.S., order directly from the Fluke Parts Department by calling 1-800-526-4731.

Some components may be ordered directly from the manufacturer using the manufacturer's part number. Refer to the code-to-name list at the end of this section.

In the event the part you order has been replaced by a new or improved part, the replacement will be accompanied by an explanatory note and installation instructions, if necessary.

To ensure prompt and efficient handling of your order, include the following information:

1. Instrument model and serial number
2. Fluke stock number
3. Description of part
4. Printed circuit assembly (pca) part number and revision letter as printed in ink on the board
5. The reference designation or item number of the part
6. Quantity

Price information for parts is available from the Fluke Corporation and its authorized representatives. Prices are also available in a Fluke Replacement Parts Catalog, which is available on request.

CAUTION

A ϟ indicates a device that may be damaged by static discharge.

SERVICE CENTERS 4-3.

A list of technical service centers is included at the end of this section.

Table 4-1. Final Assembly (Models 79,29)

REFERENCE DESIGNATOR	DESCRIPTION	FLUKE STOCK NO	MFRS SPLY CODE	MANUFACTURERS PART NUMBER OR GENERIC TYPE	TOT QTY	NOTES
A 1	ϟ MAIN PCA			NON-PROCURABLE	1	
BT 1	BATTERY,9V,0-15MA	696534	59717	216	1	
F 1	FUSE,.406X1.375,1A,600V,FAST	830828	71400	BBS-1	1	
F 2	FUSE,.406X1.5, 15A, 600V, FAST	820829	71400	KTK-15	1	
H 1	SCREW,PH,P,THD FORM,STL,4-24,.250	519116		COMMERCIAL	1	
H 2	SCREW,PH,P,THD FORM,STL,2-14,.375	821140		COMMERCIAL	1	
H 3- 6	SCREW,PH,P,THD FORM,STL,4-14,.375	448456		COMMERCIAL	4	
H 7- 10	SCREW,PH,P,THD FORM,STL,5-14,.750	733410		COMMERCIAL	4	
LS 1	AF TRANSD,PIEZO,20 MM	642991	51406	7BB-20-604	1	
MP 9	SHIELD,TOP	885855	89536	885855	1	
MP 10- 13	FOOT,NON-SKID	640565	89536	640565	4	
MP 14	CASE,BOTTOM	900712	89536	900712	1	1
MP 15	SHIELD,BOTTOM	896225	89536	896225	1	
MP 16	SPRING,COIL,COMP,M WIRE,.500,.360	697227	83553	C0360-026-0500	1	
MP 17	CASE,TOP	885868	89536	885868	1	2
MP 18	WINDOW,LCD	896167	89536	896167	1	3
MP 19	BRACKET,LCD	646653	89536	646653	1	
MP 20	MASK,BRACKET	885848	89536	885848	1	
MP 21, 22	CONN,ELASTOMERIC,LCD TO PWB,1.900 L	649632	0K392	SG	2	
MP 23	KNOB,SWITCH	885843	89536	885843	1	4
MP 24	SHAFT,KNOB	646661	89536	646661	1	
MP 25	SPRING,DETENT	646679	89536	646679	1	
MP 26	SHOCK ABSORBER	428441	89536	428441	1	
MP 27	DECAL,TOP CASE	890285	89536	890285	1	5
MP 28	LABEL, WINDOW FLUKE-PHILIPS	844340	89536	844340	1	
MP 31	HOLSTER & FLEXSTAND ASSY, YELLOW	890298	89536	890298	1	
MP 32	TEST LEADS	855742	89536	855742	1	
MP 33	MANUAL,PAMPHLET,DMM ACCESSORY LIST	825851	89536	825851	1	
MP 34	79/29 QUICK REFERENCE OPERTOR CARD	897801	89536	897801	1	
MP 50	CONTAINER,BOTTOM	680645	89536	680645	1	
MP 51	CONTAINER,TOP	885871	89536	885871	1	
MP 52	CONTAINER,INSERT	680637	89536	680637	1	
MP 54	SHOCK ABSORBER	900837	89536	900837	1	
S 2	SWITCH,MOMENTARY, YELLOW	890280	89536	890280	1	6
S 4	CONTACT,ANNUNCIATOR	642983	89536	642983	1	
TM 1	FLUKE 79/29 SERIES II OPERATOR MANUAL	896196	89536	896196	1	
TM 2	79/29 WARRANTY & INFORMATION CARD	897806	89536	897806	1	
U 5	LCD,4.5 DIGIT,BAR GRAPH,MULTIPLEXED	875534	62786	LS429A-C	1	

NOTES:

ϟ Static sensitive part.
1 For Fluke Model 29 Stock Number is 896170
2 For Fluke Model 29 Stock Number is 895818
3 For Fluke Model 29 Stock Number is 896126
4 For Fluke Model 29 Stock Number is 748129
5 For Fluke Model 29 Stock Number is 895842
6 For Fluke Model 29 Stock Number is 895800

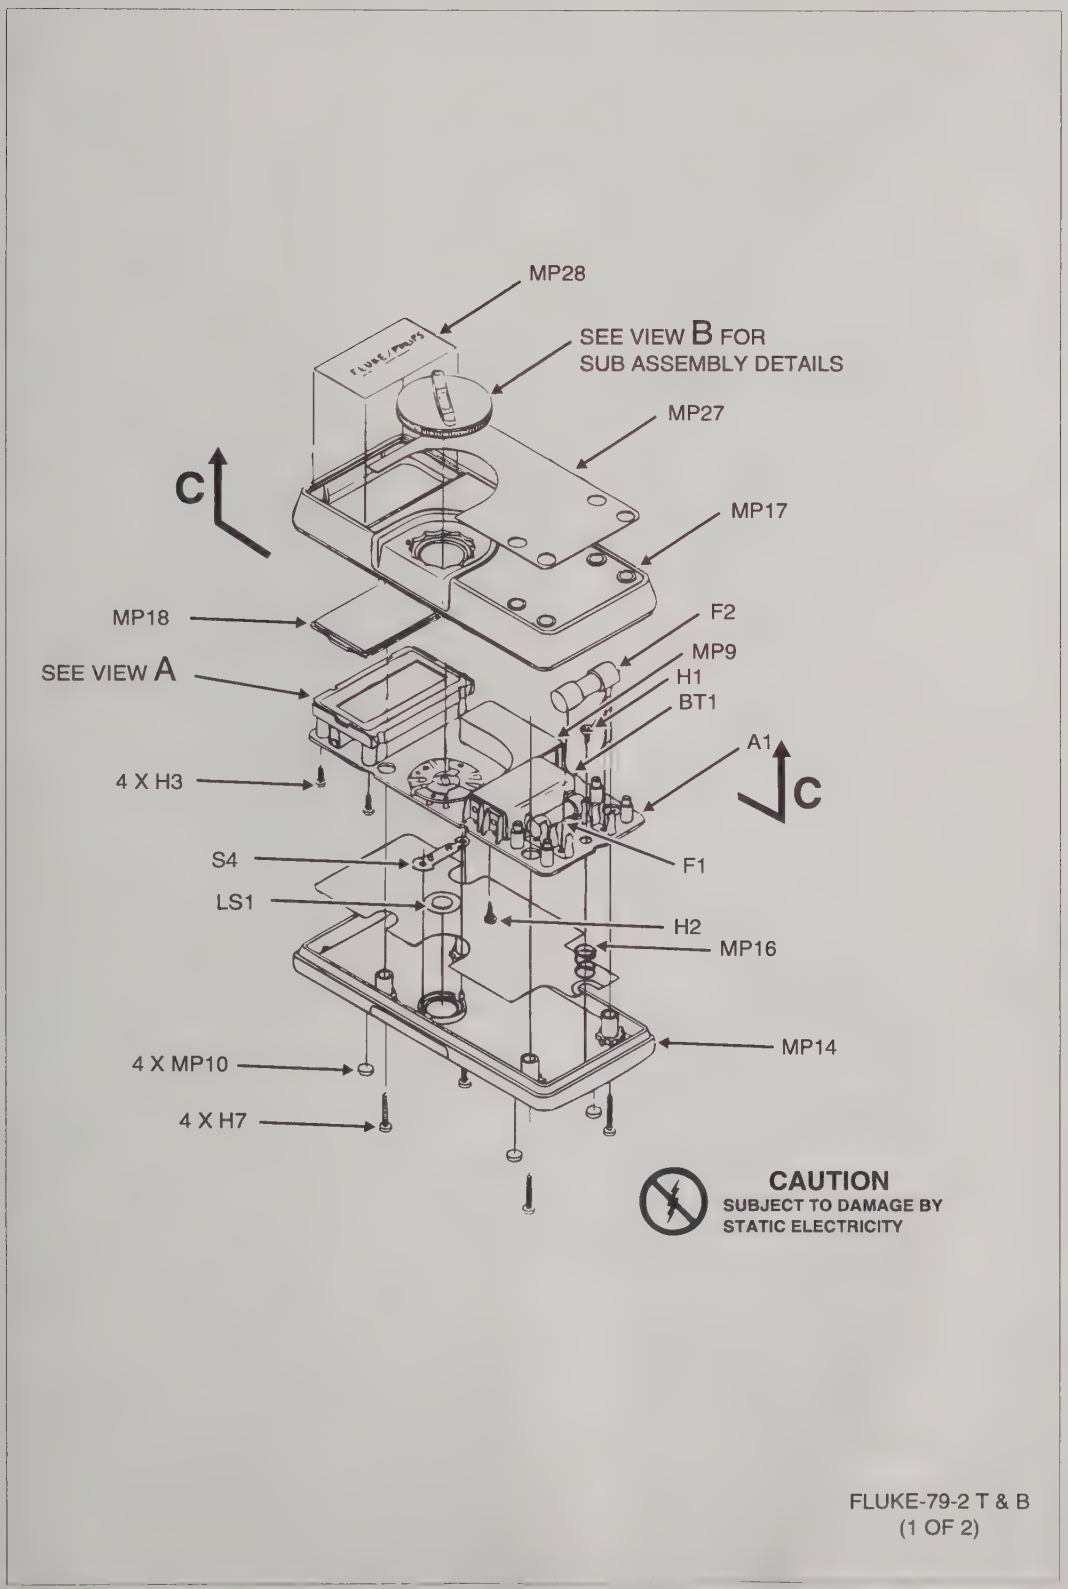

Figure 4-1. Final Assembly (Models 79,29)

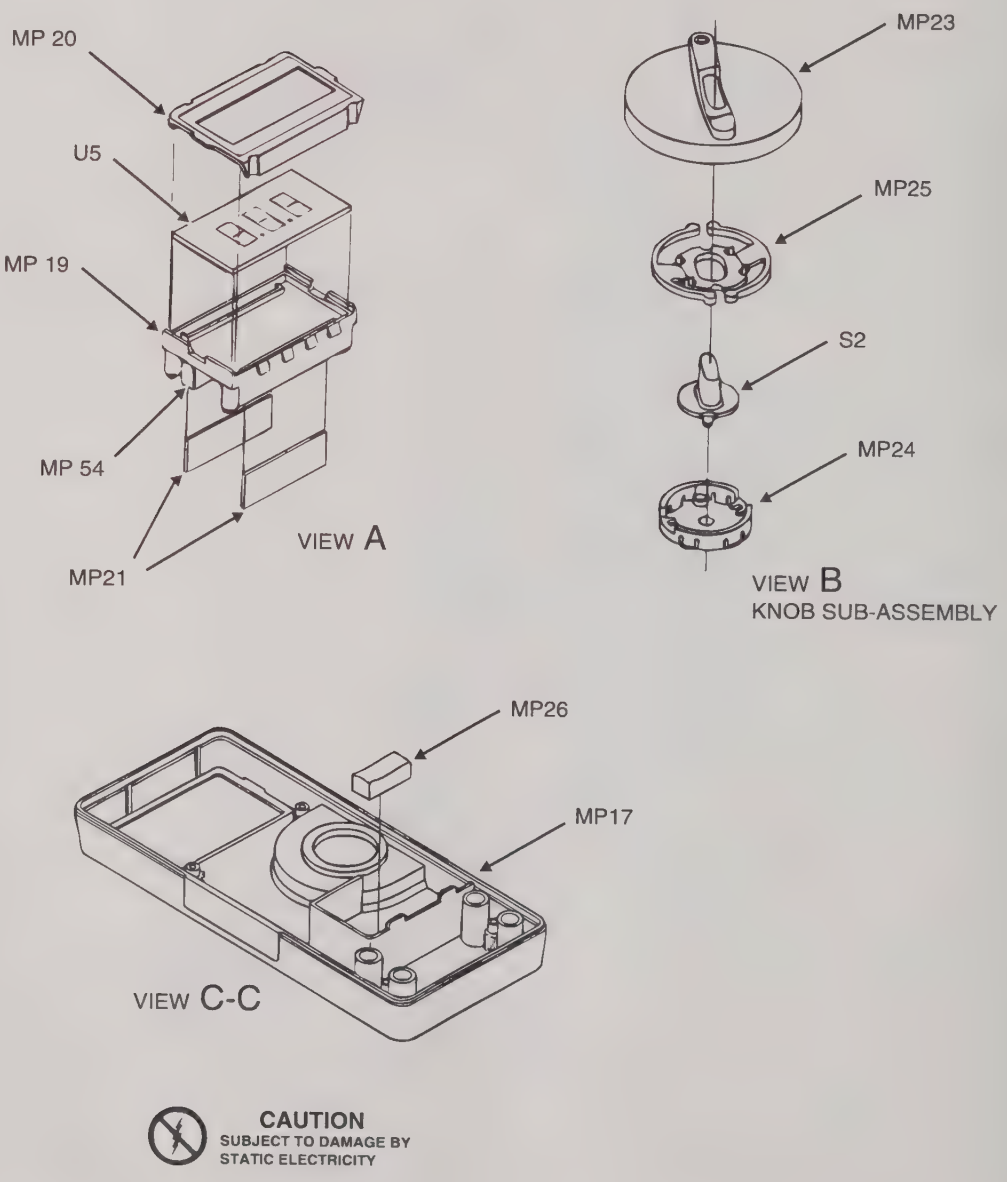

Figure 4-1. Final Assembly (Models 79,29) (cont)

Table 4-2. A1 Main PCA (Models 79,29)

REFERENCE DESIGNATOR		DESCRIPTION	FLUKE STOCK NO	MFRS SPLY CODE	MANUFACTURERS PART NUMBER OR GENERIC TYPE	TOT QTY	NOTES
C 1		CAP,POLYES,0.01UF,+-10%,1000V	822361	37942	160-103K1000F	1	
C 5		CAP,TA,15UF,+-20%,6.3V	807636	56289	199D156X06R3BG2	1	
C 8, 9		CAP,POLYCA,0.027UF,+-10%,63V	720979	68919	MKC2273K63	2	
C 10, 28, 29		CAP,TA,0.47UF,+-20%,25V,3216	876180	56289	293D474X0025A2T OR W	3	
C 11		CAP,POLYPR,0.022UF,+-10%,63V	821579	68919	MKP20223K63V	1	
C 14, 21		CAP,TA,47UF,+-20%,10V,7343	867580	56289	293D476X0010D2T or W	2	
C 15, 16		CAP,CER,0.1UF,+-10%,25V,X7R,1206	747287	04222	12065C104KATMA	2	
C 17, 18		CAP,CER,22PF,+-10%,50V,C0G,1206	740563	04222	12065A220KAT050R	2	
C 20		CAP,CER,3.3PF,+-0.25PF,1500V,C0J	904636	91984	6010C0J3R3C1.5KVT14	1	
C 24		CAP,TA,10UF,+-20%,10V	714766	56289	199D106X0010BE2	1	
C 26		CAP,CER,150PF,+-5%,50V,C0G,0805	866533	04222	08055A151JATMA	1	
C 30		CAP,CER,220PF,+-10%,50V,C0G,1206	758078	04222	12065A221KAT050R	1	
C 31, 33, 34		CAP,CER,0.01UF,+-10%,50V,X7R,1206	747261	04222	12061C103KATMA	3	
C 35		CAP,TA,4.7UF,+-20%,10V,3528	867262	56289	293D475X0010B2T or W	1	
CR 1, 4		DIODE,SI,100 PIV,1.0 AMP	912451	14936	GF1B	2	
DS 1		SURGE PROTECTOR,1500V,+-20%	655134	91984	100T1	1	
J 1- 4		RECEPTACLE,INPUT	642959	89536	642959	4	
MP 1, 2		CONTACT,600V,FUSE	659524	89536	659524	2	
MP 3, 4		600 VOLT FUSE CONTACT	707190	89536	707190	2	
MP 6		CONTACT,BATTERY	642967	89536	642967	1	
MP 7		CONTACT,BATTERY	654228	89536	654228	1	
Q 1, 2	ϟ	TRANSISTOR,SI,NPN,SELECT IEBO,SOT-23	821637	04713	SMBT1388LT1	2	
Q 3, 9, 12	ϟ	TRANSISTOR,SI,NPN,SMALL SIGNAL,SOT-23	742676	04713	MMBT3904T	3	
Q 4	ϟ	TRANSISTOR,SI,NPN,SMALL SIGNAL,SOT-23	912469	04713	MMBT6429LT1	1	
Q 5	ϟ	TRANSISTOR,SI,PNP,50V,0.2W,SOT-23	820910	04713	MMBT5087LT1	1	
Q 10	ϟ	TRANSISTOR,SI,P-CHAN,SOT-23	832477	17856	SST175	1	
Q 11	ϟ	TRANSISTOR,SI,PNP,SMALL SIGNAL,SOT-23	742684	04713	MMBT3906T	1	
Q 13	ϟ	TRANSISTOR,SI,PNP,SELECT ICER,SOT-23	887179	04713	SMBT1531LT1	1	
R 1		RES,MF,1K,+-1%,100PPM,FLMPRF,FUSIBLE	832550	91637	CMF-65 ARO 1K	1	2
R 2	ϟ	RES,CERM,1M,+-1%,2W,100PPM	876177	23237	GS-3-1M-1%	1	
R 3	ϟ	RES,CERM,1.5K,+-1%,.125W,100PPM,1206	810630	91637	CRCW1206-152FB02	1	
R 4, 17, 18, R 23	ϟ ϟ	RES,CERM,1M,+-1%,.125W,100PPM,1206	836387 836387	91637	CRCW1206-1004FB02	4	
R 5		RES,WW,9.99,+-0.25%,1W,50PPM	876321	91637	RS-1A-SPECIAL	1	
R 6		RES,WW,0.010,+-0.25%,1W,100PPM	877076	05347	2627	1	
R 7	ϟ	RES,CERM,1K,+-5%,.125W,200PPM,1206	745992	91637	CRCW1206-1001JB02	1	
R 9, 13, 29, R 60, 61, 64	ϟ ϟ	RES,CERM,100K,+-5%,.125W,200PPM,1206	740548 740548	91637	CRCW1206-1003JB02	6	
R 14		RES,MF,10K,+-0.1%,0.125W,100PPM	658955	59124	MF50D1002B	1	
R 15		RES,MF,90K,+-0.1%,0.125W,100PPM	658906	59124	MF50D9002B	1	
R 19	ϟ	RES,CERM,56.2K,+-1%,.125W,100PPM,1206	831305	91637	CRCW1206-5622FB02	1	
R 20, 25, 37	ϟ	RES,CERM,205K,+-1%,.125W,100PPM,1206	769836	91637	CRCW1206-2053FB02	3	
R 21		RES,VAR,CERM,100K,+-25%	912493	32997	3304W-1-104	1	
R 22, 38	ϟ	RES,CERM,536K,+-1%,.125W,100PPM,1206	845420	91637	CRCW1206-5363FB	2	
R 24	ϟ	RES,CERM,280K,+-1%,.125W,100PPM,1206	886833	91637	CRCW1206-2803FB	1	
R 28	ϟ	RES,CERM,68.1K,+-1%,.125W,100PPM,1206	851845	91637	CRCW1206-6812FB	1	
R 30		RES,MF,20K,+-0.25%,0.125W,50PPM	715029	59124	MF50C2002C	1	
R 31, 40	ϟ	RES,CERM,22.6K,+-0.5%,100PPM,1206	876219	59124	RK73H2BTE2262D	2	
R 33	ϟ	RES,CERM,10K,+-5%,.125W,200PPM,1206	746610	91637	CRCW1206-1002JB02	1	
R 34		RES,VAR,CERM,1K,+-25%	912498	32997	3304W-1-102	1	
R 35	ϟ	RES,CERM,620K,+-5%,.125W,200PPM,1206	811919	91637	CRCW1206-6203JB02	1	
R 44	ϟ	RES,CERM,82K,+-5%,.125W,200PPM,1206	811794	91637	CRCW1206-8202JB02	1	
R 57	ϟ	RES,CERM,33K,+-5%,.125W,200PPM,1206	746669	91637	CRCW1206-3302JB02	1	
R 59	ϟ	RES,CERM,510,+-5%,.125W,200PPM,1206	746388	91637	CRCW1206-5100JB02	1	

Table 4-2. A1 Main PCA (Models 79,29) (cont)

REFERENCE DESIGNATOR	DESCRIPTION	FLUKE STOCK NO	MFRS SPLY CODE	MANUFACTURERS PART NUMBER OR GENERIC TYPE	TOT QTY	NOTES
R 62	ϟ RES,CERM,107K,+-1%,.125W,100PPM,1206	875224	91637	CRCW1206-1073FB	1	1
R 63	ϟ RES,CERM,2.2K,+-5%,.125W,200PPM,1206	746479	91637	CRCW1206-2201JB02	1	
RT 1	THERMISTOR,RECT.,POS.,1K,+-40%,25C	446849	54583	911P84E102YU13	1	
RV 1, 2	VARISTOR,910,+-10%,1.0MA	876193	09214	V910LSX1399	2	
S 1	SWITCH,ROTARY	885876	89536	885876	1	
U 1	DIODE,RECT,BRIDGE,BV=50V,IO=1A	912456	55464	CBR1-D020S	1	
U 4	IC N-WELL CLASSIC, ASSEMBLY TESTED	884556	89536	884556	1	
VR 1	ϟ IC, 1.23V,150 PPM T.C.,BANDGAP V. REF	634451	27014	LM385Z-1.2D26Z	1	
Y 1	CRYSTAL,131.072KHZ,0.003%,3X8MM	912464	61429	327-131.072	1	
Z 1	RES NET THK FILM TESTED	828152	89536	828152	1	

NOTES:

ϟ Static sensitive part.

1. On early Models, R62 may = 110K
2. R1 is a fusible resistor. To ensure safety, use exact replacement only.

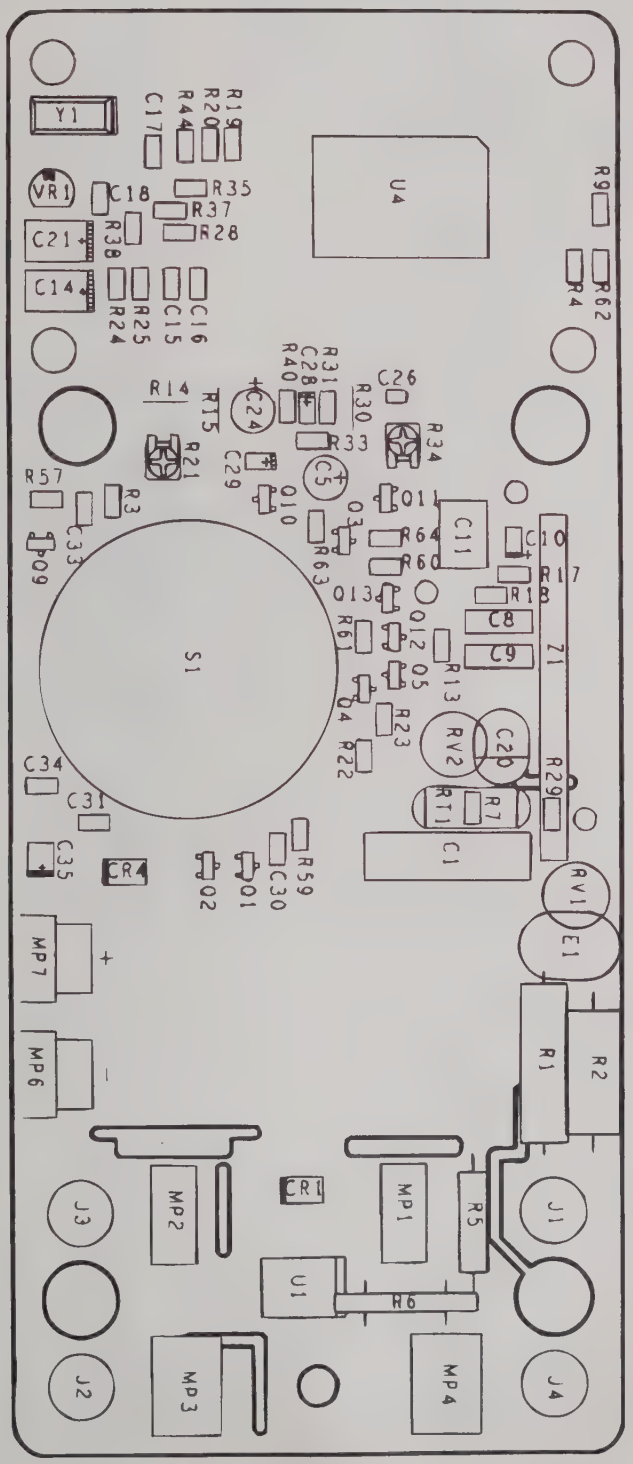

FLUKE-79-2-4001

Figure 4-2. A1 Main PCA (Models 79,29)

Manufacturers Supply Codes

04222
AVX Kyocera Corp.
Myrtle Beach, SC

04713
Motorola Inc.
Semiconductor Products Sector
Phoenix, AZ

05347
Ultronix Inc
(Tel Labs)
Grand Junction, CO

09214
General Electric Co.
Semiconductor Products Dept.
Auburn, NY

0K392
Shin-Etsu Silicones of America
(S P America)
Torrance, CA

14936
General Instrument Corp.
Power Semiconductor Div.
Hicksville, NY

17856
Siliconix Inc.
Santa Clara, CA

23237
I R C, Inc.
Microcircuits Div
Philadelphia, PA

27014
National Semiconductor Corp.
Santa Clara, CA

32997
Bourns Inc.
Trimpot Div.
Riverside, CA

37942
North American Capacitor Co.
Mallory Div.
Greencastle, IN

51406
Murata Erie, No. America Inc.
Symrna, GA

54583
TDK Electronics Corp.
Port Washington, NY

55464
Central Semiconductor Corp.
Div. of Central State
Industries,Inc.
Hauppauge, NY

56289
Sprague Electric Co.
Nashua, NH

59124
KOA Speer Electronics Inc.
Bradford, PA.

59717
Eveready Battery Co. Inc.
Asheboro, NC

61429
Fox Electronics
Fort Myers, FL

62786
Hitachi America Ltd.
Semiconductor & IC Div.
San Jose, CA

68919
Inter-Technical Group Inc., The
Wima Division
Elmsford, NY

71400
Bussman - Now Magnum
Div. of Cooper Industries Inc.
St. Louis, MO

83553
Associated Spring Barnes Group,
Inc.
Gardena, CA

89536
Fluke Corporation
Everett, WA

91637
Dale Electronics Inc.
Columbus, NE

91984
Maida Development Co.
Hampton, VA

SERVICE CENTERS

USA

California
Fluke Service Center
46610 Landing Parkway
Fremont, CA 94538
TEL: (510) 651-5112
FAX: (510) 651-4962

Fluke Service Center
16715 Von Karman Avenue
Suite 110
Irvine, CA 92714
TEL: (714) 863-9031
FAX: (714) 757-7556

Florida
Fluke Service Center
550 S. North Lake Blvd.
Altamonte Springs, FL 32701-5227
TEL: (407) 331-2929
FAX: (407) 331-3366

Illinois
Fluke Service Center
1150 W. Euclid Avenue
Palatine, IL 60067
TEL: (708) 705-0500
FAX: (708) 705-9989

New Jersey
Fluke Service Center
W. 75 Century Rd
or P.O. Box 930
Paramus, N.J. 07652
TEL: (201) 599-9500 (599-0919)
FAX: (201) 599-2093

Texas
Fluke Service Center
2104 Hutton Drive
Suite 112
Carrollton, TX 75006
TEL: (214) 406-1000
FAX: (214) 406-1072

Washington
Fluke Service Center
Fluke Corporation
Building #4
1420 - 75TH St. S.W.
M/S 6-30
Everett WA 98203
TEL: (206) 356-5560
FAX: (206) 356-6390

INTERNATIONAL

Argentina
Coasin S.A.
Virrey del Pino 4071
1430 CAP FED
Buenos Aires
TEL: 54-1-552-5248
FAX: 54-1-11-1427

Viditec S.A
Lacarra 234
Buenos Aires CP 1407
TEL: 54-1-636-1199
FAX: 54-1-636-2185

Australia
Phillips Customer Support
Scientific and Industrial
23 Lakeside Drive
Tally Ho Technology Park
East Burwood
Victoria 3151
TEL: 61-3-881-3666
FAX: 61-3-881-3636

Phillips Customer Support
Scientific and Industrial
Block F, Centrecourt
34 Waterloo Road
North Ryde, N.S.W. 2113
TEL: 61-2-888-0416
FAX: 61-2-888-0440

Austria
Fluke Vertriebsges. m.b.H.
SudrandstraBe 7
P.O. Box 10
A-1232 Vienna
TEL: 43-1-61410-30
FAX: 43-1-61410-10

Belgium
Fluke Belgium N.V./S.A.
T&M Customer Support
Langeveldpark - Unit 5 & 7
P.Basteleusstraat 2-4-6
1600 St. Pieters - Leeuw
TEL: 232-2-331-2777
FAX: 32-2-331-1489

Bolivia
Coasin Bolivia S.R.L.
Casilla 7295
La Paz, Bolivia
TEL: 591-2-340962
FAX: 591-2-359268

Canada
Fluke Electronics Canada Inc.
400 Britannia Road East, Unit #1
Mississauga, Ontario
L4Z 1X9
TEL: 905-890-7600
FAX: 905-890-6866

Chile
Intronsa Inc.
Sociedad Comercial de
Instrumentacion Electronica, S.A.
Casilla 16150
Santiago
TEL: 56-2-232-1886, 232-4308
FAX: 56-2-232-2694

China
Fluke Service Center
Room 2111 Scite Tower
Jianguomenwai Dajie
Beijing 100004
TEL: 86-1-512-3435 or 6351
FAX: 86-1-512-3437

Colombia
Sistemas E Instrumentacion, Ltda.
Carrera 21, NO. 39A-21, OF. 101
Ap. Aereo 29583
Bogota
TEL: 57-1-287-5424
FAX:57-1-287- 248

Costa Rica
Electronic Engineering, S.A.
Carretera de Circunvalacion
Sabanilla Av. Novena
P.O. Box 4300-1000
San Jose
TEL: 506-53-3759
FAX: 506-25-1286

Denmark
Fluke Denmark A/S
T&M Customer Support
Ejby Industrivej 40
DK 2600 Glostrup
TEL: 45-43-44-1900
FAX: 45-43-43-9192

Ecuador
Proteco Coasin Cia., Ltda.
Av. 12 de Octubre 2449 y Orellana
P.O. Box 17-03-228-A
Quito
TEL: 593-2-230283 or 520005
FAX: 593-2-561980

Fiji
Communications Pacific, Ltd.
37 Freeston Road
Walu Bay
G.P.O. Box 858
Suva
TEL: 679 312744
FAX: 679 300379

Finland
Fluke Finland Oy
Sinikalliontie 3
SF-02631 Espoo
TEL: 358-0-5026-600
FAX: 358-0-5026-414

France
Fluke France S.A.
37 Rue Voltaire
BP 112
93700 Drancy, Cedex
TEL: 33-1-48-966331
FAX: 33-1-48-966330

Germany
FlukeDeutschland Gmbh
Service & Calibration Lab.
Oskar-Messter-Strasse 18
D-8045 Ismaning/Munich
TEL: 49-89-9605260
FAX: 49-89-9605270

Philips Messgerate GmbH
Test & Measurement
Meiendorferstrasse 205
P.O. Box 730 370
D-2000 Hamburg 73
TEL: 49-40-6797-434
FAX: 49-40-6797-421

Hong Kong
Schmidt & Co (H.K.) Ltd.
1st Floor
323 Jaffe Road
TEL: 852-9223-5623
FAX: 852 834-1848

Ireland, Republic of
Fluke U.K. LTD.
Customer Support
Colonial Way
Watford
Hertfordshire WD2 4TT U.K.
TEL: 44-923-240511
FAX: 44-923-225067

India
Hinditron Services Pvt. Inc.
33/44 Rajmahal Vilas Extension
8th Main Road
Bangalore 560 080
TEL: 91-80-348266
FAX: 91-80-3345022

Hinditron Services Pvt. Ltd
1st Floor, 17-B,
Mahal Industrial Estate
Mahakali Road, Andheri East
Bombay 400 093
TEL: 91-22-630-0043
FAX: 91-22-836-4682

Hinditron Services Pvt. Ltd
Castle House, 5th Floor
5/1 A, Hungerford Street
Calcutta 700 017

Hinditron Services Pvt. Ltd
15 Harrington Road
Chetpet
Madras 600031

Hindtron Services Pvt. Ltd.
204-206 Hemkunt Tower
98 Nehru Place
New Delhi 110 019
TEL: 91-11-643-3675
FAX: 91-11-642-9118

Hinditron Services Pvt. Ltd.
Field Service Center
Emerald House
5th Floor
114 Sarojini Devi Road
Secunderabad 500 003
TEL: 91 842-844033

Indonesia
P. T. Daeng Brothers
Phillips House
J/n H.R. Rasuna Said Kav. 3-4
Jakarta 12950
TEL: 62-21-520-1122
FAX: 62-21-520-5189

SERVICE CENTERS (cont)

Israel
R.D.T Electronics Engineering, Ltd.
P.O. Box 58072
Tel Aviv 61580
TEL: 972-3-645-0745
FAX: 972-3-647-8908

Italy
Fluke Italia S.R.L.
T&M Customer Support
Viale Delle Industrie, II
20090 Vimodrone (MI)
TEL: 39-2-268434-435
FAX: 39-2-250-1645

Japan
Fluke Corporation
Sumitomo Higashi Shinbashi Bldg.
1-1-11 Hamamatsucho
Minato-ku
Tokyo 105
TEL: 81-3-3434-0188
FAX: 81-3-3434-0170

Korea
B&P International Co., Ltd.
Geopung Tocon A-1809
203-1 Nonhyun-Dong
Kangnam-Ku
Seoul 135-010
TEL: 82 02 546-1457
FAX: 82 02 546-1458

IL MYOUNG, INC.
780-46, Yeogsam-Dong
Youngdong P.O. Box 1486
Kangnam-Ku
Seoul
TEL: 82 2 552-8582-4
FAX: 82 2 553-0388

Malaysia
CNN. SDN. BHD.
17D, 2nd Floor
Lebuhraya Batu Lancang
Taman Seri Damai
11600 Jelutong Penang
TEL: 60-4-657-9584
FAX: 60-4-657-0835

Mexico
Mexel Mexicana De Electronica
Industrial, S.A. De C.V.
Diagonal No. 27
Entra Calle de Eugenia Y Ave.
Col. Del Valle
C.P. 03100, Mexico D.F.
TEL: 52-5-682-8040
FAX: 52-5-687-8695

Mexicana De Electronica
Industrial, S.A.
F-14 Bassett Center #541
6001 Gateway West
ElPaso, TX 79925
TEL: 52-16-23-02-35
FAX: 52-16-23-02-35

Netherlands
Fluke Europe B.V.
Test & Measurement
Science Park
Eindhoven 5110
P.O. Box 1337
5602 BH Eindhoven
TEL: 31-40-644-226
FAX: 31-40-644-260

Fluke Netherland B.V.
Technische Service Prof. Act.
Hurksestraat, 2C
Gebouw HBR
5652 AJ Eindhoven
TEL: 31-40-723-220
FAX: 31-40-723-337

New Zealand
Phillips Customer Support
Scientific & Industrial
Private Bag 41904
St. Lukes, 2 Wagener Place
Mt. Albert, Auckland 3
TEL: 64-9-894-4160
FAX: 64-9-849-7814

Norway
Fluke Norway A/S
Customer Support
P.O. Box 6054 Etterstad
N-0601 Oslo
TEL: 47-22-653400
FAX: 47-22-653407

Peru
Importaciones & Representaciones
Electronicas S.A.
JR. Pumacahua 955
Lima 11
TEL: 51-14-23-5099
FAX: 51-14-31-0707

Philippines
Spark Electronics Corp.
P.O. Box 610, Greenhills
Metro Manila 1502
TEL: 63-2-700-621
FAX: 63-2-721-0491

Portugal
Fluke Iberica, S.L.
IE Division - T&M Department
(Delegacao em Portugal)
Campo Grande, 35-7oB
1700 Lisboa
TEL: 351-1-795-1712
FAX: 351-1-795-1713

Singapore
Fluke Corporation
Singapore Representative Office
#27-03 PSA Building
460 Alexandra Road
Singapore 0511
TEL: 65-276-5161
FAX: 65-276-5759

South Africa
Spescom Measuregraph (PTY) Ltd.
Spescom Park
Crn. Alexandra Rd. & Second St.
Halfway House, Midrand 1695
TEL: 27-11-315-0757
FAX: 27-11-805-1192

Spain
Fluke Ibérica S.L.
Depto. Tecnico Instrumentacion
Martinez Villergas 2
28027 Madrid
TEL: 34-1-326-7512
FAX: 34-1-326-0668

Sweden
Fluke Sweden AB
T&M Customer Support
Kronborgsgrand 11
P.O. Box 61
S-164 94
TEL: 46-8-751-0230
FAX: 46-8-751-0480

Switzerland
Fluke Switzerland AG
T&M Customer Support
Riedstrasse 12
Postfach 360
CH-8953 Dietikon 1
TEL: 41-1-745-2244
FAX: 41-1-745-2240

Taiwan
Schmidt Electronics Corp.
5th Floor, Cathay Min Sheng
Commercial Building,
No. 180 Sec. 2
344 Min Sheng East Road
Taipei
TEL: 886-2-501-3468
FAX: 886-2-502-9692

Thailand
Measuretronix Ltd.
2102/31 Ramkamhang Road
Bangkok 10240
TEL: 66-2-375-2733, 375-2734
FAX: 66-2-374-9965

United Kingdom
Fluke U.K. LTD.
Customer Support
Colonial Way
Watford
Hertfordshire WD2 4TT
TEL: 44-923-240511
FAX: 44-923-225067

Uruguay
Coasin Uruguaya S.A.
Casilla de Correo 1400
Libertad 2529
Montevideo
TEL: 598-2-789-015
FAX: 598-2-492-199

Venezuela
Coasin C.A.
Calle 9 Con Calle 4, Edif. Edinurbi
Apartado de Correos NR-70.136
Los Ruices
Caracas 1070-A
TEL: 58-2-241-0309, 241-1248
FAX: 58-2-241-1939

Vietnam
Schmidt-Vietnam Co., Ltd.
6/Fl.Fedalogical College Bldg.
Dich Vong, KM 8 Highway 32
Tu Liem - Hanoi
TEL: 84-4-346186
FAX: 84-4-346188

Chapter 5
Schematic Diagrams

FIGURE **CONTENTS** **PAGE**

5-1 A1 Main PCA 5-3
5-2 Signal Flow Diagram. 5-6

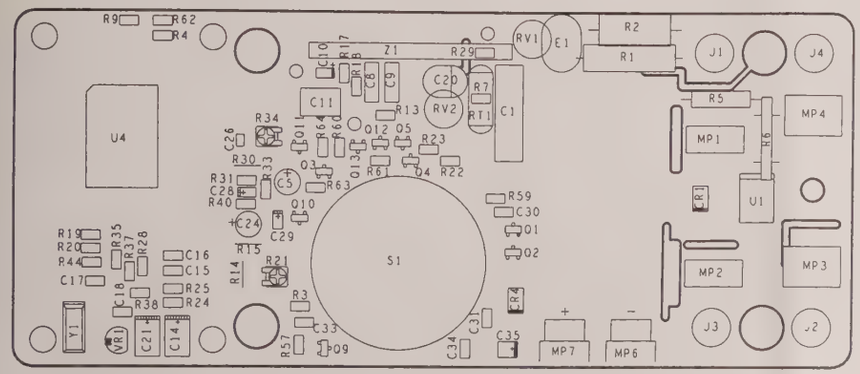

FLUKE 79-2-4001

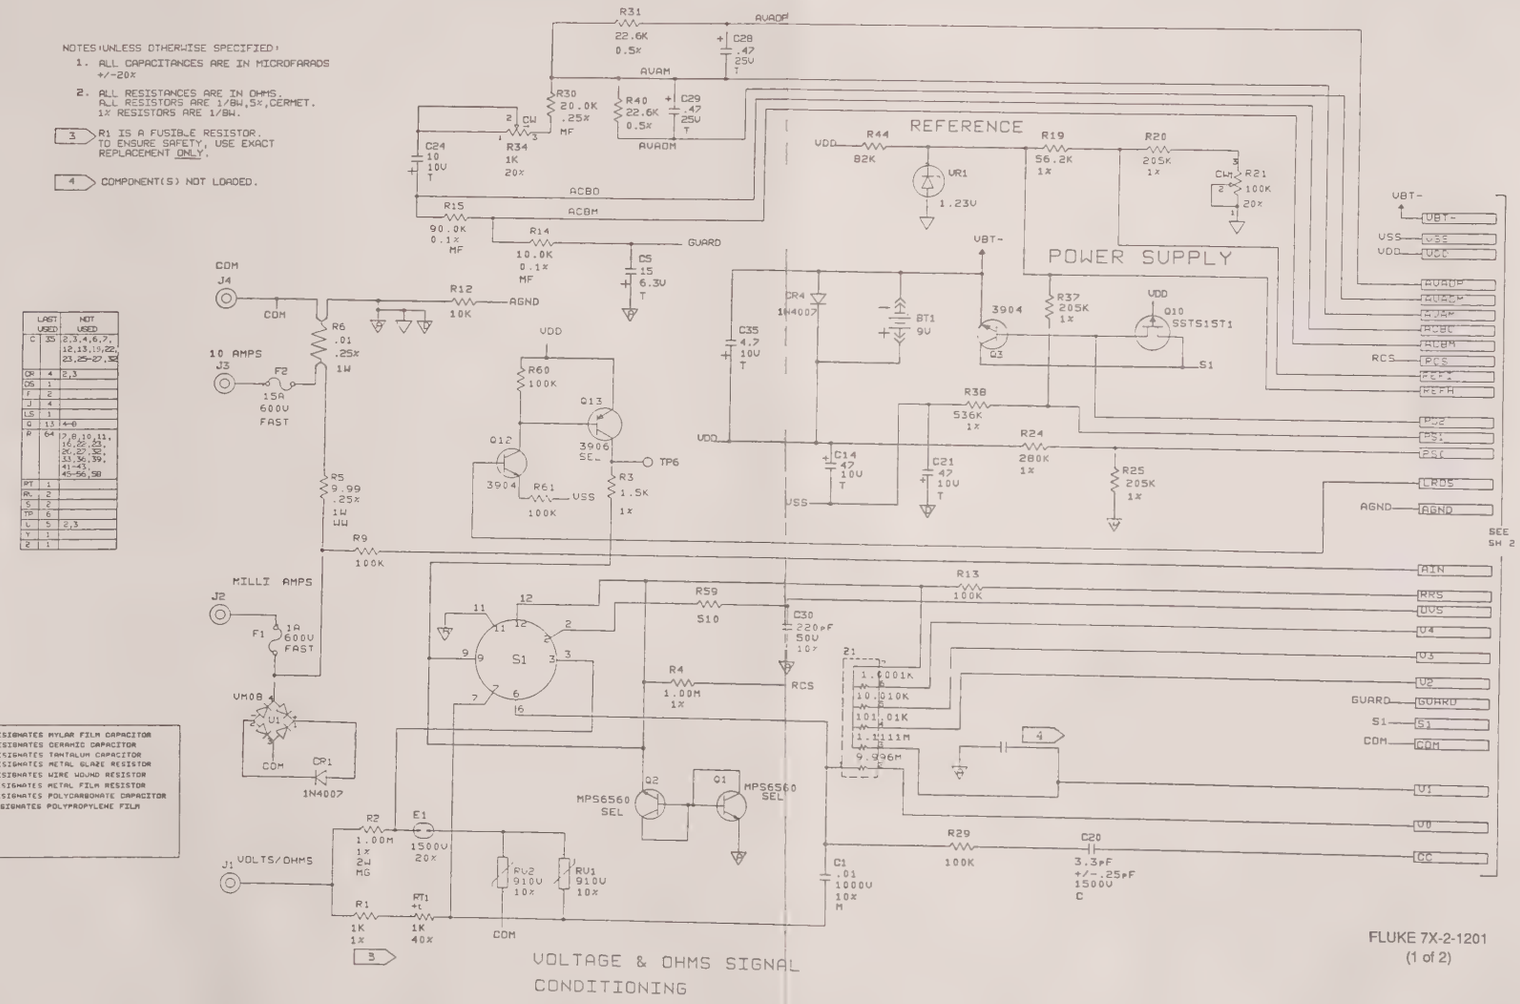

FLUKE 7X-2-1201
(1 of 2)

Figure 5-1. A1 Main PCA

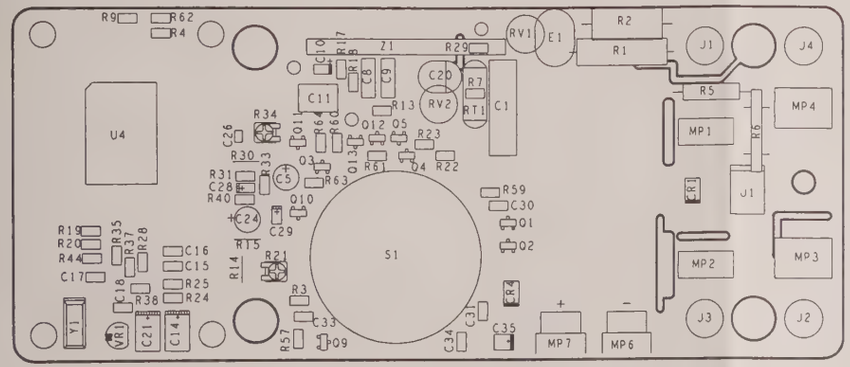

FLUKE 79-2-4001

S1 KEY

POSITION	FUNCTION	FUNCTION CODE* F2 F1 F0
1	OFF	- - -
2	VAC	0 0 0
3	Hz	0 0 1
4	VDC	1 1 1
5	mVDC	0 1 1
6	OHMS/CAP	0 1 0
7	LRG CONT/DT	1 0 0
8	CURRENT	1 0 1

*1 = COMMON
0 = VSS

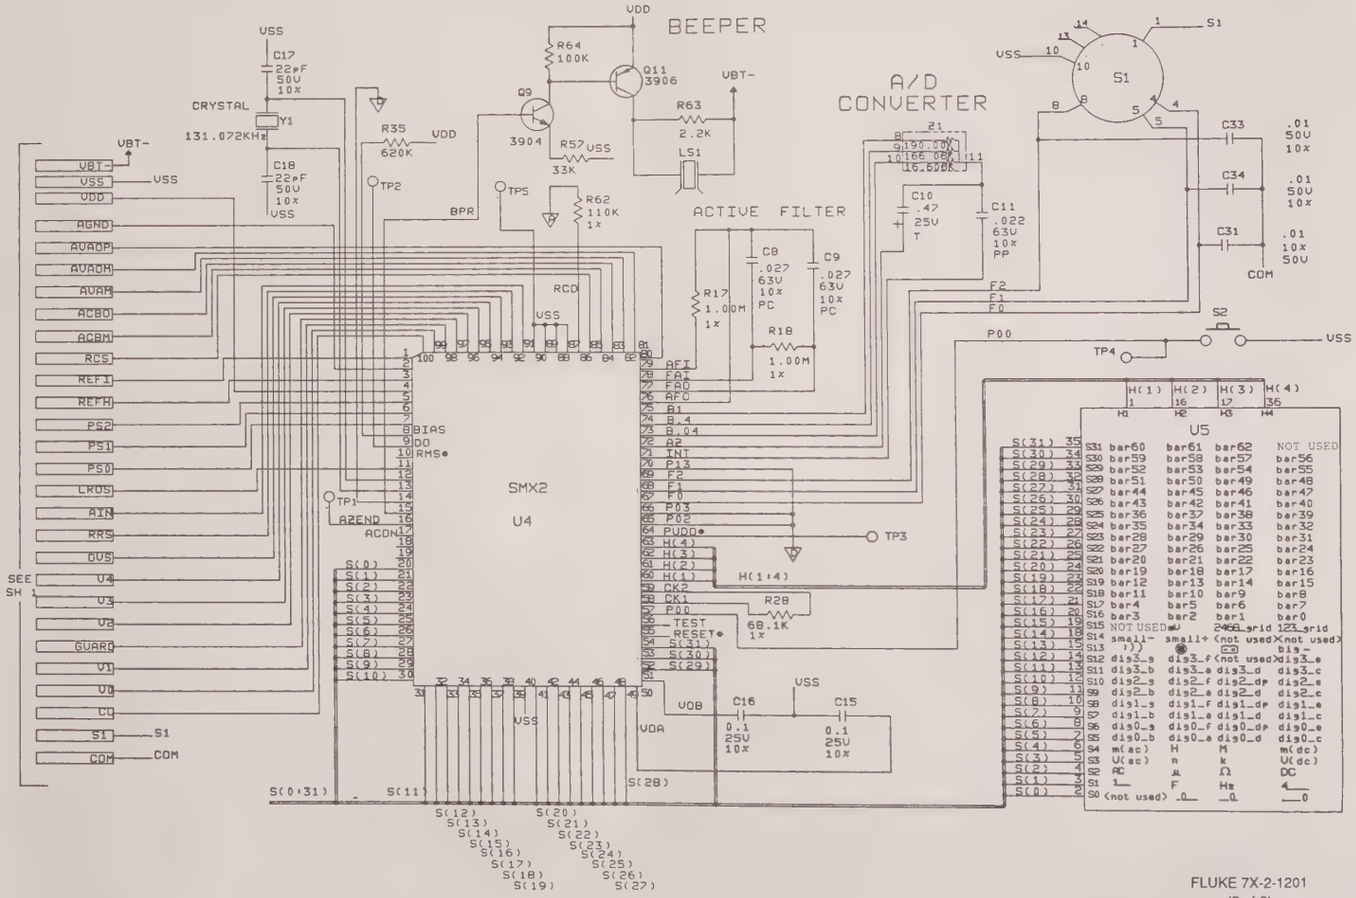

Figure 5-1. A1 Main PCA (cont)

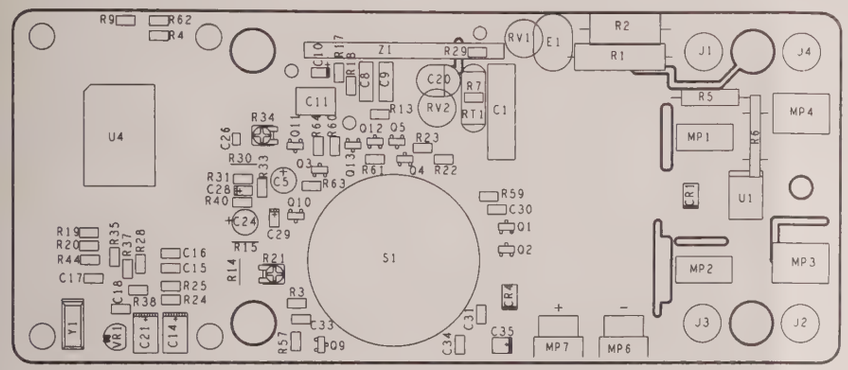

FLUKE 79-2-4001

COMPONENT TYPE ABBREVIATION CODE			
SYM	CAPACITOR	SYM	RESISTOR
M	MYLAR/POLYESTER	MG	METAL GLAZE
C	CERAMIC	WW	WIRE WOUND
T	TANTALUM	MF	METAL FILM
PC	POLY CARBONATE		
PP	POLYPROPYLENE FILM		

REFERENCE DESIGNATION			
LAST USED		NOT USED	
R	64	R	8,10,11,12,16,26,27,32 36,39,41-43,45-56,50
C	35	C	2,3,4,6,7,12,13, 19,22,23,25,27,32.
BT	1		
U	5	U	2,3
J	4		
LS	1		
Q	13	Q	6-8
S	2		
TP	6		
CR	4	CR	2,3
RT	1		
Y	1		
VR	1		
Z	1		
E	1		

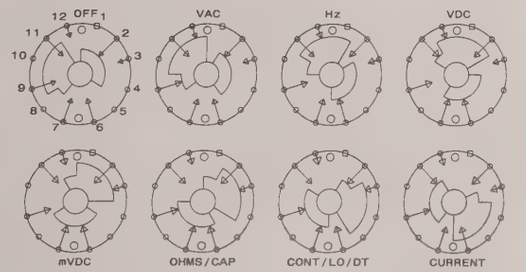

S1 KEY

POSITION	FUNCTION
1	OFF
2	VAC
3	Hz
4	VDC
5	mVDC
6	OHMS/CAP
7	CONT/LOW OHMS/DT
8	CURRENT

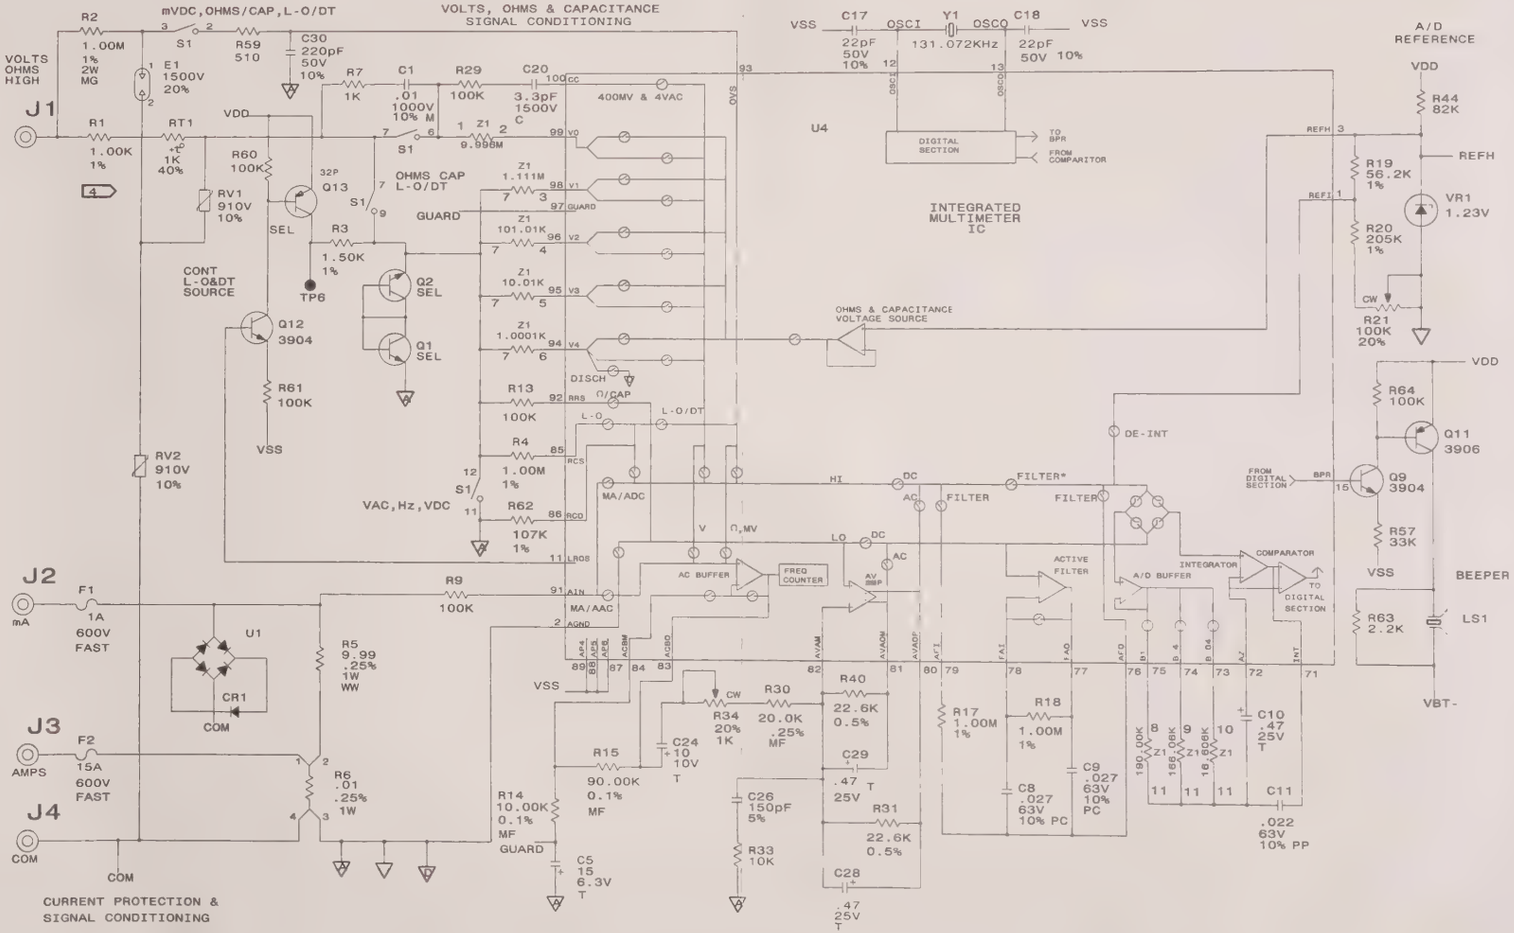

Figure 5-2. Signal Flow Diagram

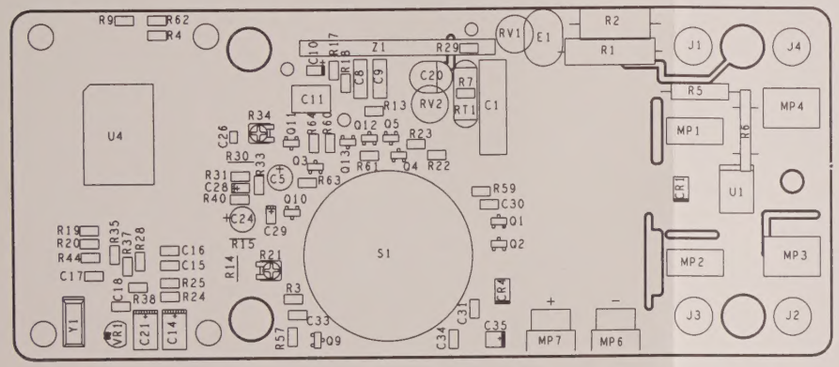

FLUKE 79-2-4001

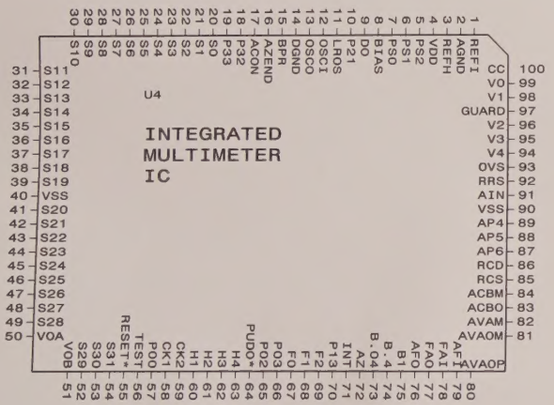

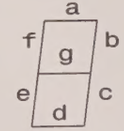

S1 KEY

POSITION	FUNCTION	FUNCTION CODE* F2	F1	F0
1	OFF	-	-	-
2	VAC	0	0	0
3	Hz	0	0	1
4	VDC	1	1	1
5	mVDC	0	1	1
6	OHMS/CAP	0	1	0
7	CONT,LOW OHMS/DT	1	0	0
8	CURRENT	1	0	1

*1 = COMMOM
0 = VSS

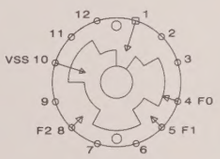

OFF POSITION

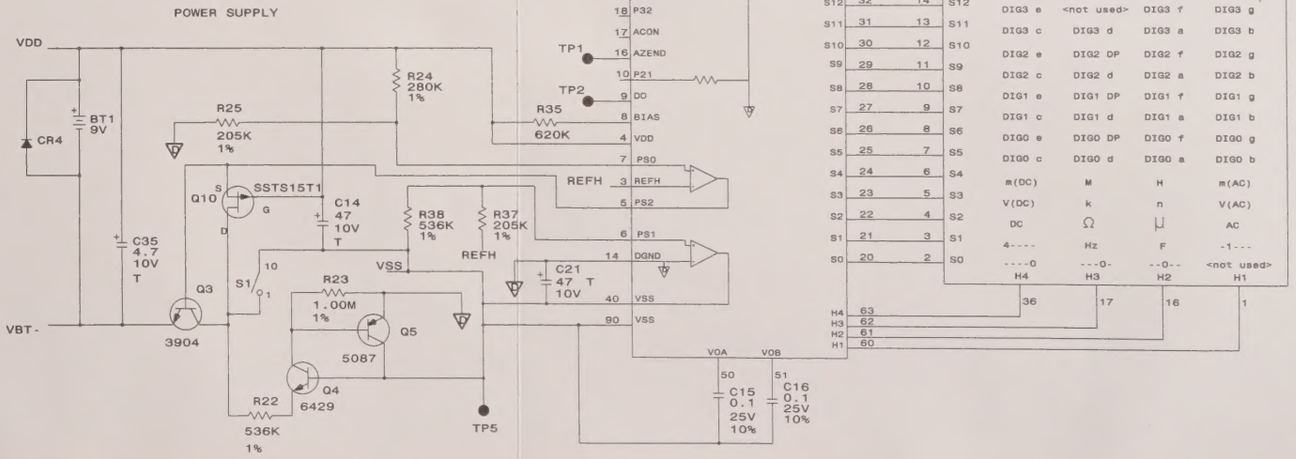

Figure 5-2. Signal Flow Diagram (cont)

www.manualsplus.com
1020791